



User Manual

English

versaCount™

Part-No. 2 772 058 englisch; 04/2010

 VEEDER-ROOT

Table of Contents

1	General Information	7
1.1	Introduction	7
1.2	Explanation of symbols	9
1.3	Limitation of Liability	10
1.4	Copyright protection	11
1.5	Warranty	11
2	Safety	12
2.1	Intended Use	12
2.2	Assembly, connecting, programming	13
2.3	Responsibilities of the machine/plant manufacturer and operator	16
2.4	Operator requirements	17
2.5	Hazards	18
2.6	Safety devices	20
3	Setup and Operation	21
3.1	Dimension Sheet / Multifunction Counter Installation	22
3.2	Connecting the Multifunction Counter	23
3.3	Display	28
3.4	Key functions	30

Table of Contents

3.5	Overview of Operating Elements	33
3.6	Programming the Standard Function	34
3.7	Programming the Function Codes	36
3.8	Programming the Preset Modes	37
3.9	The Prescaler Programming	39
3.10	Programming the (User) Times	40
3.11	Output of Device ID	42
3.12	Adjusting the backlight	43
4	General Functions of the Multifunctional Counter	44
5	Pulse Counter	51
5.1	Description of Pulse Counter	51
5.2	Signal diagrams – counter input signals	53
5.3	Signal diagrams – counter output signals	56
5.4	Programming the counter function codes	60
6	Tachometer	75
6.1	Tachometer description	75
6.2	Signal diagrams – tachometer	77
6.3	Programming the tachometer function codes	78

Table of Contents

7	Timer	88
7.1	Timer description	88
7.2	Signal diagram – timer input signals	91
7.3	Signal diagrams – timer output signals	94
7.4	Programming the timer function codes	94
8	Shift Counter	111
8.1	Shift counter description	111
8.2	Scroll between Total Sum and Partial Sums	112
8.3	Signal diagrams – shift counter input signals	113
8.4	Signal diagrams – shift counter output signals	115
8.5	Programming the shift-counter function codes	116
9	Batch Counter	131
9.1	Batch counter description	131
9.2	Signal diagrams – batch counter	133
9.3	Programming the batch counter function codes	134
10	Technical Data	150
11	Transport, Packaging, Storage	157

Table of Contents

12	Maintenance and cleaning	157
13	Trouble shooting	158
14	Spare parts	160
15	Dismantling and disposal	160
16	Model numbers	161
17	Accessories and spare parts	162

General Information

1 General Information

1.1 Introduction

These operating instructions provide important information about the operation and handling of the multifunctional counter. To ensure safe operation it is vital that the safety information and instructions be strictly observed.

For Versacount XP models please reference the amendment 2 772 069 in addition to these instructions.

The multifunction counter has been designed for industrial use and for installation in machinery or industrial plants.

The party responsible for the end use/application has the ultimate responsibility to ensure that the multifunction counter is installed and set-up in accordance with the operating guidelines set forth in this manual.

All local regulations applicable to safety and accident prevention must be adhered to for the installation and operation of this multifunction counter.

Please read these instructions before installing or operating the multifunction counter.

These operating instructions are an integral part of the product and must be maintained in the direct vicinity of the multifunction counter or in a place that is readily accessible.

General Information

These operating instructions contain important information concerning the installation, programming and operation the multifunction counter.

Description of the programming sequence:

- Programming of the basic functions
- Programming of the function codes
- Programming of the user times
- Programming of the prescaler
- Programming of the presets

Before commissioning the multifunction counter, consider locking-out functions not required for regular operation.



The executed programming functions must be documented.

General Information

1.2 Explanation of symbols

The warnings in these operating instructions are designated by symbols and words that indicate the severity of a safety hazard.

These warnings must be observed at all times and appropriate actions must be taken at all times to prevent accidents, damage, personal injury or death.



Danger!

This warning indicates a direct safety hazard, which may lead to serious injuries or even death if preventative action is not taken.



Warning!

This warning indicates a possible safety hazard, which may lead to serious injuries or even death if preventative action is not taken.



Caution!

This warning indicates a possible safety hazard, which may lead to minor damage or injuries if preventative action is not taken.

General Information



Note!

This symbol indicates a potentially hazardous situation, which may lead to damage to property or to the environment if preventative action is not taken.



Tips and recommendations

This symbol is used to point out to useful tips, recommendations and information for optimal operation.

1.3 Limitation of Liability

The information contained in these operating instructions was gathered in accordance with applicable standards and regulations.

The manufacturer shall not assume any liability for damage caused by:

- Non-adherence to the operating instructions
- Improper use
- Employment of unskilled or untrained personnel
- Modifications or changes to the multifunction counter
- Opening of the multifunction counter

We reserve the right to make changes or modifications to the design, specifications or options without notice.

General Information

The actual product may not appear exactly as illustrated in this manual.

1.4 Copyright protection

The operating instructions must be treated confidentially and used exclusively by the personnel responsible for the setup, maintenance, repair and operation of the counter. Disclosure of these operating instructions to any third parties is not permissible without the prior written consent of the manufacturer.



The data and information stated here, including text, drawings, images and other illustrations, are protected by copyright laws and subject to industrial property rights. Any misuse of such information will be subject to prosecution.

1.5 Warranty

Our standard warranty is available on our website at www.veeder-rootcounters.com.

2 Safety

This section provides an overview of important consideration to ensure the safe and trouble-free operation of your counter. Non-adherence to these instructions may result in serious injury or death.

2.1 Intended Use

The multifunctional counter is exclusively designed and constructed for the intended use and purposes described herein.

The multifunctional counter serves together with a corresponding sensor for the counting of pieces, lengths, flow rates, velocities and times, as well as for the controlling and monitoring of machinery and equipment by sending and receiving control signals.



Warning!

Safety hazards due to improper use!

Using the multifunction counter for any purposes other than those described may cause hazardous situations.

Claims for damages resulting from any kind of misuse shall be expressly excluded.

2.2 Assembly, connection, programming

The multifunction counter is built and tested in accordance with IEC/EN 61010-1, Protection Class II – Safety Measures for Electronic Measuring Equipment. They have left the factory in a condition that is in compliance with all safety-relevant requirements. In order to maintain this condition and ensure operational safety, the User is required to observe the safety notes and warnings in these operating instructions!



Danger!

Risk of safety hazards due to incorrect/faulty assembly and connection.

- The maximum operating voltages must not be exceeded!
- 12 – 24VDC and 24VAC multifunction counters must be operated at safety extra-low voltages (SELV) and under potential-compensated conditions in order to prevent hazardous shock.
- An external fuse must be provided to protect the multifunction counter (see Chapter 10, Technical Data).
- Installation and assembly shall be carried out by skilled and trained electricians only.
- Do not connect or disconnect a multifunction counter while it is in contact with a live current. Always disconnect the main power supply before connecting or disconnecting the multifunction counter.
- All terminals should be properly insulated to prevent accidental contact.

- To prevent accidental shock or injury, ensure that live conductors are securely connected to the terminals and properly insulated.
- The rules and regulations set forth by the local electricity providers have to be observed.
- Do not establish any connections with non-allocated (NC) terminals.
- Multifunction counters may only be operated when properly installed.
- If safe operation is impaired, make the multifunction counter inoperable and secure it against inadvertent operation.
- Scope of applications: industrial processes and controls. Overvoltage across the terminals must be limited to the values specified in overvoltage category II.
- The installation and wiring has considerable impact on the electromagnetic properties of the multifunction counter. Therefore, electromagnetic compatibility of the entire application must be ensured during the installation.
- In areas presenting the risk of ESD (electrostatic discharge), use ESD-protected plugs and switches.
- If the functions "prescaler input", "preset input" and "key reset" are not allowed to be used by the machine/plant operator, access to these functions must be locked. Depending on the application, non-permissible input may impair the safe operation and function.



Danger!

The party responsible for the commissioning of the multifunction counter must take precautions to ensure the safe operation of the device.

- The party responsible for the commissioning of the multifunction counter is responsible for the preparation of operating instructions including:
 - Description of functions according to the programming of the multifunction counter;
 - Description of the settings to be adjusted by the machine/plant operator;
 - Information concerning the occupational safety requirements and possible hazards arising from the operation of the machine/plant.

2.3 Responsibilities of the machine/plant manufacturer and operator

Multifunctional counters are designed for installation and use in machines/plants. Therefore, the manufacturer and operator of the machine/plant are subject to the legal obligations concerning occupational safety and health.

In particular:

- The machine/plant manufacturer shall be obligated to ensure that all the requirements mentioned in section 2.2 be adhered to during the assembly, connection and programming.
- The operator shall obtain all required information regarding applicable occupational safety rules. In addition, the operator shall be obligated to prepare a risk assessment of possible hazards that may arise at the place of operation. This risk assessment shall be documented in the form of operating instructions for the machine/plant.
- The machine/plant manufacturer and operator are responsible for regularly checking local occupational safety and health requirements and, if required, making appropriate revisions to the application instructions.
- The operator shall ensure that all staff members who are involved in the machine/plant operation have read and fully understood these instructions. Moreover, the operator shall be obligated to train the operating personnel at regular intervals and inform them about any potential hazards.

- The owner shall ensure that the operation, maintenance and repair of the machine/plant is exclusively carried out by skilled and trained personnel.

2.4 Operator requirements



Warning:

**Risk of personal injury is operated by unqualified individuals!
Improper handling may cause severe personal injuries and damage to property.**

- Actions requiring special skills must be carried out only by trained personnel as designated in these instructions.
- Keep unqualified/untrained personnel away from hazard areas.

The following staff qualification requirements have been defined for the various scopes of activities:

- **Instructed personnel**
These persons have been instructed by the operator with regard to the tasks assigned and the potential hazards caused by improper handling.
- **Skilled personnel**
Due to their educational and professional skills, know-how and experience, as well as their knowledge of relevant regulations, these persons are capable of executing their assigned tasks, safely and competently.
- **Skilled and trained electricians**
Due to their educational and professional skills, know-how and experience, and their knowledge of electrical codes, these persons are capable of executing electrical work safely and competently.

2.5 Hazards

This section indicates certain risks, which may arise as a result of improper installation or application.

The safety information and warnings in these instructions must be observed in order to reduce the risk of hazards or injury.



Danger!

Lethal hazard of electric shock!

Any contact with live currents presents a direct lethal hazard.

Damages to the insulation or individual components present a potential lethal hazard.

- **In the event of damage to the insulation, immediately disconnect the power supply and initiate the appropriate repair work.**
- **All electrical work must be carried out by skilled and trained electricians.**
- **Before commencing your work on the electrical system, disconnect it from the main power supply and check that it no longer carries any live currents.**
- **Prior to conducting any maintenance, cleaning or repair work, disconnect the main power supply and secure it against inadvertent engagement.**
- **Do not short-circuit or bypass/jump fuses.**

Safety

2.6 Safety devices



Warning! Lethal hazard by non-functional or non-existent safety devices!
Safety devices must be installed to ensure operational safety.

The multifunction counter does not include any installed safety devices.
These safety devices must be installed externally.

Protect the electrical supply of the multifunction counter by means of external fuses (see Chapter 10, Technical Data).

Whether or not additional safety devices (e.g. emergency-off buttons) have to be provided depends on the application and construction of the machine or plant.

The machine/plant manufacturer shall be responsible for providing such additional safety devices in according with their own risk assessment and applicable local laws and regulations.

3 Setup and Operation


3 Setup and Operation

- 1 Display
- 2 Operating keys
- 3 Flat gasket
- 4 Bracket
- 5 Enclosure
- 6 Plug for DC or sensor supply; Electronic inputs and outputs
- 7 Connection terminal AC supply and relay contacts
- 8 Circuit diagram




3 Setup and Operation

3.1 Dimension Sheet / Installation of Multifunction Counter

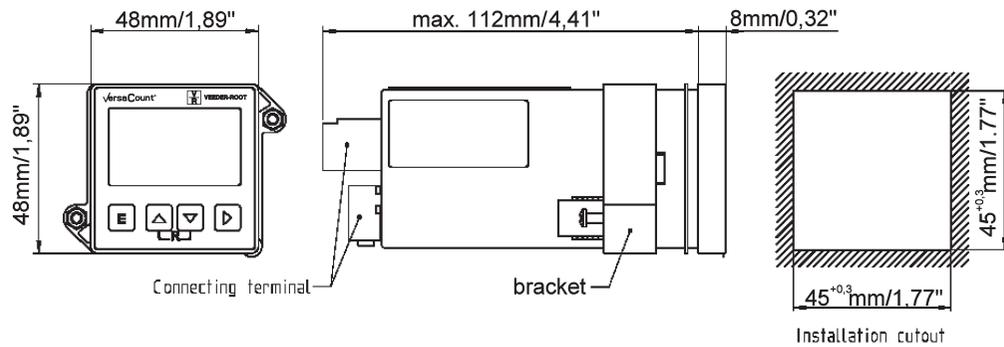


3 Setup and Operation

3.2 Connecting the Multifunction Counter

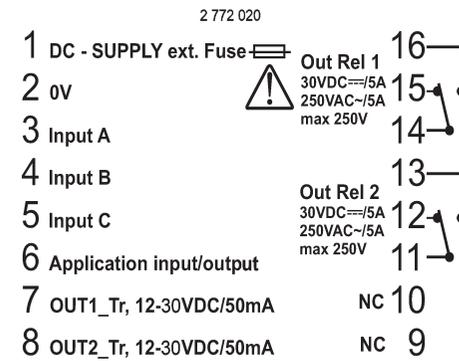


VDC 2 relays / 2 transistors

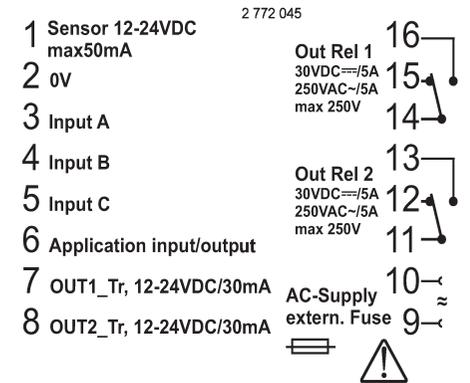


VAC 2 relays / 2 transistors

3 Setup and Operation

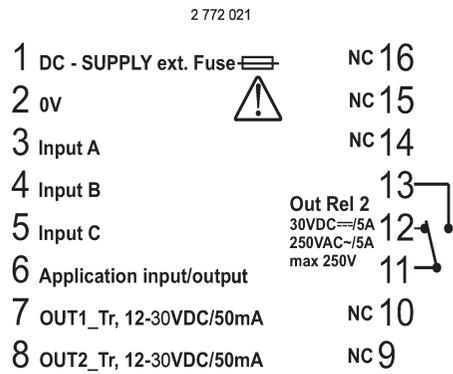


VDC 1 relays / 2 transistors

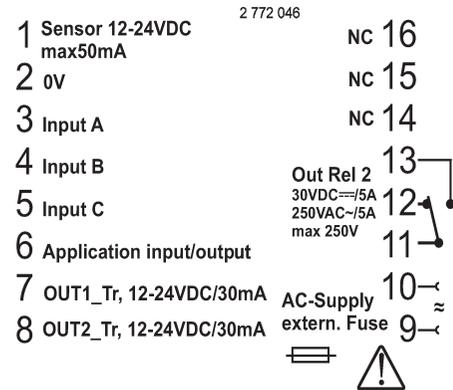


VAC transformer 1 Relays / 2 transistors

3 Setup and Operation

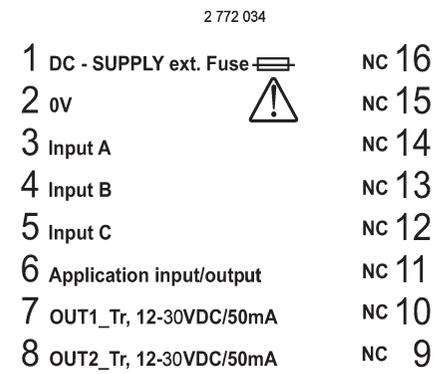


VDC 2 transistors

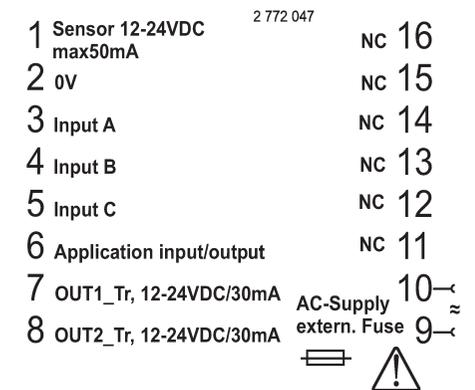


VAC 2 transistors

3 Setup and Operation

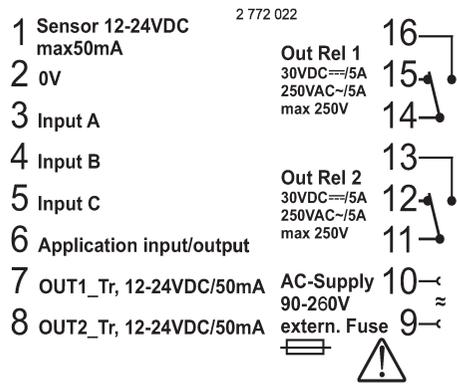


VAC switching power supply 2 relays / 2 transistors

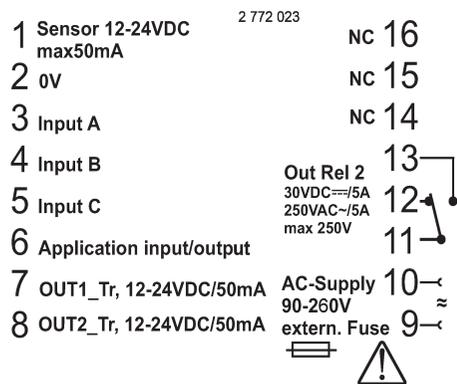

VAC switching power supply 1 relay / 2 transistors

3 Setup and Operation

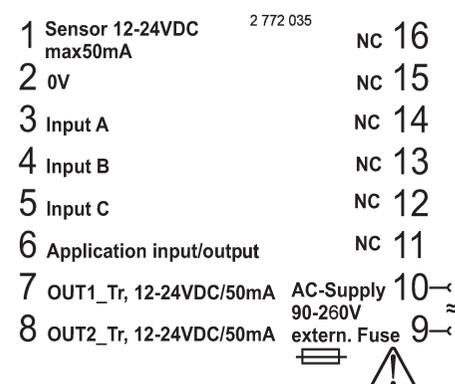

VAC switching power supply 2 transistors

The plug has to be disconnected from the counter before the cables are fastened by means of screws or screw-type terminals.

Do not connect the encoder to a direct current line voltage without protective circuit for EMC. For cable lengths > 30 m/100 ft a protective circuit is always required!

When programming the input level to TTL an additional protective circuit is required.

We recommend installation in a metal, grounded panel.

3 Setup and Operation

For DC-Versions:

When switching on the device in PNP-Mode, a short signal is applied to inputs A,B,C and the application input.

To suppress the pulse in TTL-Mode, each input should be connected to a 10 kOhm resistor and the 0V.

When switching on the device a short signal is applied to the application output.

To suppress this pulses connect a resistor of 10 kOhm / 0.225 W to the 0 V and the application-output.

3.3 Display

After powering on, all characters are illuminated for approx. 2 seconds; then the display changes over to the Display or Programming Mode.

The display is available in four different versions:


Transflective Positive: black figures on background

Transmissive Negative: white figures on black background

Transmissive red: red figures on black background

Transmissive green: green figures on black background

3 Setup and Operation

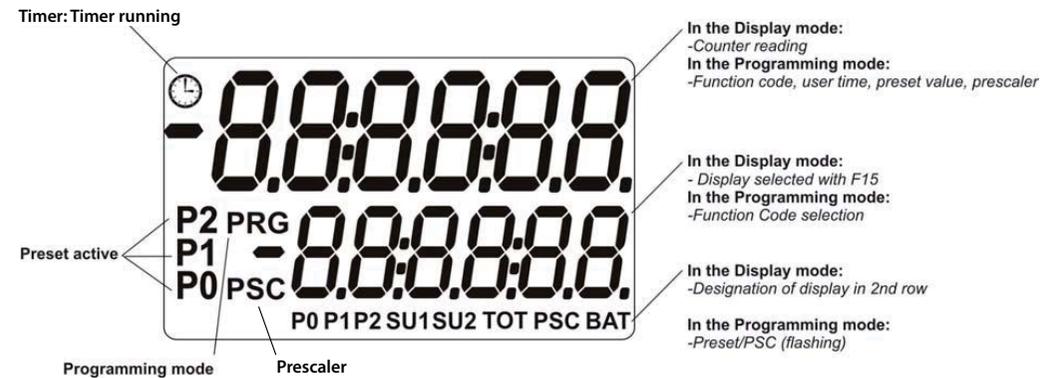

3 Setup and Operation

3.4 Key functions

			
Enter - Key	UP - Key	DOWN - Key	SHIFT - Key

Programming

If pressed together with POWER ON (keep keys pressed and switch on the device)

	Selects standard functions
	Sets function codes
	Selects ID data (Model number, manufacturing date, serial number,...)
	Sets User Times

3 Setup and Operation

During the Programming of Function Codes

	Display function code Switches between function code text and function code number
---	--

During Operation


	Sets reset
	Sets preset 0
	Sets preset 1
	Sets preset 2
	Sets prescaler

3 Setup and Operation

Additional function for shift and batch counters	
	Switches between total sum and partial sums and/or count value and totalizer or batch counter
Additional functions for timers	
	Timer start (If enabled with function code F15)
	Timer stop (If enabled with function code F15)
Additional functions backlight versions	
	Go to the adjustment menu (hold for 5 seconds)
 + 	Adjust the intensity (brighter or darker)
	Save and go back to display mode (press within 15 seconds)

3 Setup and Operation

3.5 Overview of Operating Elements

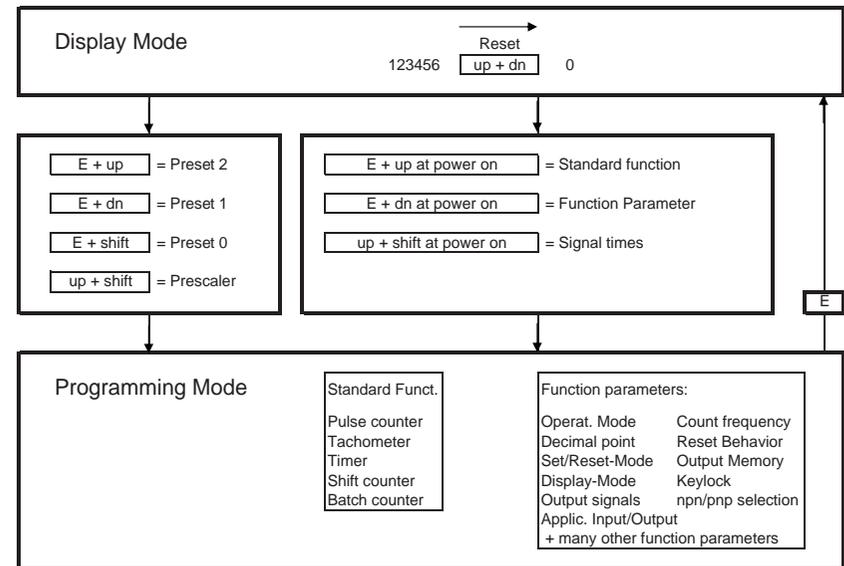

3 Setup and Operation

3.6 Programming the Standard Function

The device described here is a multifunction counter, which can be programmed for a variety of functions and applications, i.e. pulse counter, tachometer, timer, shift counter or batch counter. The first step is to set the standard function (the default factory setting is "pulse counter").

Now continue with the programming of the function codes (Chapters 5-9) or User Times (Chapter 3.10)

Enter Programming mode	Change function setting:	Save, return to counter operation
 + 	 or 	
Keep pressed and switch Power on simultaneously	press	press

3 Setup and Operation

Function code	Display Row 1	Function	No.	Display Row 2	
Fn	FUNCEE	Sets Standard Function	0*	PULSCE	Pulse Counter
			1	TACHOE	Tachometer
			2	TIMER	Timer
			3	SHIFCE	Shift Counter
			4	BATCHC	Batch Counter

3 Setup and Operation

3.7 Programming the Function Codes

The function codes (system parameters) are used to program the function of the inputs and outputs and the device itself. The selection options are described in detail in Chapters 5 to 9.

Enter Programming mode	Change function setting	Save and change to next function code	Save and change to counter operation
			
Keep pressed and switch Power on simultaneously	press	press	press

Change between Text Display and Numerical Display



In the function code Programming Mode, the first row shows the name of the function code in the form of text (7-segment display). The second row shows the selectable option in a text form. By simultaneously pressing the Up and Down buttons, the display in the first row changes to a numerical display; after pressing these buttons once again, the display in the second row also changes to a numerical display. Pressing these buttons for a third time reverts both rows back to the text display.

3 Setup and Operation



Attention: With each change among text and numeric display, the currently selected function code will return to the factory default setting and may have to be readjusted.

The factory default setting is designated with an asterix *.

3.8 Programming the Preset Values

By simultaneously pressing the E + Up, E + Down or E + Shift key you can change to the Preset programming mode:

Use the shift key in the programming mode to change a setting position. The selected position will start to flash. Use the shift key again to move one position to the right. Then use the UP or Down key to increment or decrement the position by 1.

Rule for the 6th position: The change from 9 to 0 or 0 to 9 is indicated by a changing prefix.


Use the E key to leave the programming mode and return to the display mode. Your entries will be saved.

On leaving the programming mode, the presets are tested for attainability and recalculated, if necessary, because not all the values may be attained at a prescaler value of >1. The presetting is then rounded to the closest attainable value.

3 Setup and Operation

If no key is pressed for more than 16 seconds in the programming mode, the counter will automatically return to the display mode. In this case, however, no entries will be saved except the last value saved with the E-key.

Set the preset value to 0 by pressing Up and Down keys simultaneously.

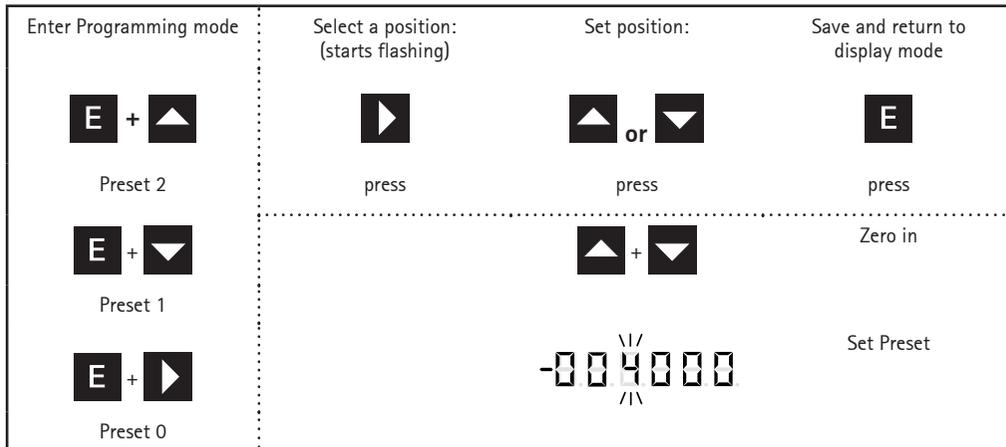

3 Setup and Operation

3.9 Prescaler programming

By pressing the Up + Shift keys simultaneously you can change to the Prescaler Programming Mode.

In the Programming mode, the position to be changed is selected by means of the shift key. The selected position will start flashing. Use the shift key again to move by one position to the right. Then use the UP or Down key to increment or decrement the position by 1. It is not possible to save a value of 00.0000. In this case the system will save 01.0000.


Use the E key to leave the programming mode and return to the display mode. Your entries will be saved.

On leaving the programming mode, all the presets are recalculated because not all the values may be attained with a prescaler value of >1. Therefore, the presets have to be checked and corrected as necessary after setting the prescaler.

If no key is pressed for more than 16 seconds in the programming mode, the counter will automatically return to the display mode. In this case, no entries will be saved except the last value saved with the E-key.

Press the Up and Down keys simultaneously to set the prescaler to 01.0000.


3 Setup and Operation

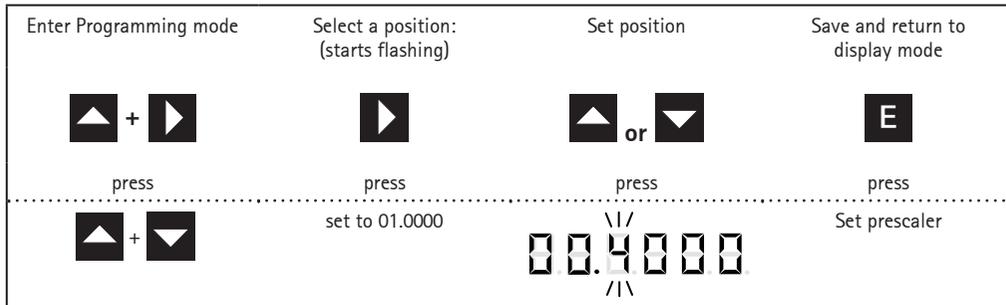

3.10 Programming the user times

For programming the signal time for monostable (timed) output signals, 9 fixed signal times between 0.02 s and 10 s are available. In addition, three different signal times between 0.01 s and 599.99 s can be set by the user. The outputs are deactivated if the setting is 0.00 s.

3 Setup and Operation

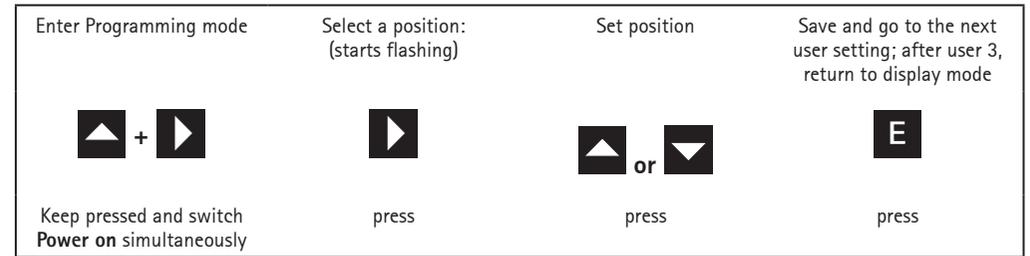

Function code	Display Row 1	Function	No.	Display Row 2
Fn		Sets the Signal Times	0*	 Signal time 1
			1	 Signal time 2
			2	 Signal time 3

3 Setup and Operation

3.11 Output of Device ID

This function is used to retrieve Device ID data, e.g. model numbers and various manufacturing information

Enter Output mode  Keep pressed and switch Power on simultaneously	Change to the next output  press	Return to counter operation  press
---	---	---

Display row 1	Display row 2
8888000	Model number
0888000	Manufacturing date
5000000	Serial number
5000000	Software number
5000000	Software release

3 Setup and Operation

3.12 Adjusting the intensity of the backlight

For counters that come with a backlight you have the ability to adjust the intensity.

To adjust the backlight, press SHIFT for more than 5 seconds. The display then shows:



By pressing the UP or DOWN key the display gets brighter or darker.

If the E-button is pressed within 15 seconds, you go back to the normal counter display and the adjusted setting is saved. If the E-button is not pressed within 15 seconds, you will go back automatically to the normal counter menu without saving any changes.

Go to the adjustment menu  press > 5 s	Adjust intensity  press	Save and go back to display mode  press within 15 s
--	---	---

4 General Functions of the Multifunction Counter

The following description is applicable for all com settings. Special functions and configurations can be found in the appropriate chapters of this manual.

Factory setting (Defaults)	Sets all the function codes to the default factory settings, i.e. all codes designated with *.
Prescaler (pulse metering factor): [PSC]	<p>The "Prescaler" is a multiplier. Each input pulse is multiplied by the adjustment factor. The display shows integers only. After a reset the counter is completely reset to 0; this also includes the non-visible value of < 1.</p> <p>At a prescaler of >1 not all the values are selectable. If invalid Preset values are selected, the counter will round them up to the next possible value.</p> <p>Example: PSC 5 cannot select (reach) Preset value 7. In this case, the counter automatically changes the Preset value to 10.</p> <p>If the Prescaler is changed, this may also affect the Preset values, which would have to be changed accordingly.</p> <p>Adjusting range 0.0001 to 99.9999</p>

4 General Functions of the Multifunction Counter

	<p>The Prescaler is used, for example, to convert counter pulses into meaningful units, to adapt the units of measurements (e.g. cm-pulses to inch-pulses), or to compensate for worn out measuring wheels.</p> <p>Formula: $PSC = \text{Desired/nominal display} / \text{number of pulses}$</p> <p>Example: Flowmeter 173 pulses per 100 liters; display in liters $PSC = 100 / 173 = 0.5780$</p> <p>Example: 1 pulse per cm; display in inch $PSC = 1 / 2.54 = 0.3937$</p> <p>Attention: This is only valid for counters and tachometers. For timers please refer to chapter 7.</p>
2nd row display:	The display of the 2nd row can be programmed as follows: Preset 2 (P2), Preset 1 (P1), Preset 0 (P0), Prescaler, Batch counter, totalizer or partial sums (shift counter)
Counter and control inputs:	The counter is fitted with 3 counter and control inputs and an application input (see below). These inputs are assigned various counter or control functions by means of function code settings.
Input logic:	The input logic can be programmed to NPN or PNP, each at the 8V-level or TTL level; see Chapter 10 for the switching threshold.

4 General Functions of the Multifunction Counter

Reset/Set:	<p>Manual setting via keys (lockable) Electronic setting via control input (and/or application input) Automatic programming after reaching the main Preselection Programmable Power-On Reset</p> <p>Depending on the function code the counter is: 1) Reset: reset to 0 P2 is the main Preset (preselect) value During unidirectional counting the counter will add up.</p> <p>or</p> <p>2) Set: reset to P2 Signal 2 at 0 - Output 2 at 0 During unidirectional counting the counter will subtract.</p> <p>For time counting, batch counting or shift counting, it is possible to reset partial sums or the total sum, batch counter or second totalizer individually or at the same time via the application input. Independently the counter can be reset to Preset value 0 via the application input (see below).</p> <p>Exception: Tachometers do not have a reset/set function</p>
-------------------	--

4 General Functions of the Multifunction Counter

Static/dynamic reset:	<p>Static reset: Reset over the entire pulse width of the reset pulse Dynamic reset: Reset via the active edge; thereafter, counter operation is possible independently of the pulse width of the reset pulse.</p> <p>Exception: Tachometers do not have a reset/set function</p>
Teach input:	Using the Teach Input (application input) the counter status is imported in Preset 2.
Decimal Point:	<p>The decimal point is only an optical reading assistance on the display and does not change the value. For example, for a value of 1 pulse per cm, the setting 0.00 makes it easier to read the value in m and cm.</p> <p>Exception: This does not apply to tachometers and timers. Please refer to Chapters 6 and 7.</p>

4 General description of the multifunction counter

Input damping (Attenuation)	<p>The inputs A and B are limited to 60 kHz. The Application Input is limited to 6 kHz.</p> <p>Following maximum input frequencies are not to be exceeded:</p> <p>Quadrature x1: A and B each 30 kHz (TTL 15 kHz) Quadrature x2: A and B each 30 kHz (TTL 15 kHz) Quadrature x4: A and B each 15 kHz (TTL 15 kHz) Unidirectional counting and directional input: Input A 60 kHz (TTL 15 kHz) Differential counting, summation (totalizing): Input A + B 60 kHz (TTL 15 kHz)</p> <p>When the application input is used as an additional count input, the above mentioned input frequencies have to be reduced by the frequency of the application input.</p> <p>If mechanical contacts are triggered (i.e. relays, switches, Reed contacts, etc.), the input frequency has to be damped (attenuated) to 30 Hz, so as to filter out bounce pulses. If damping to 30 Hz is selected, all inputs can be used at 30 Hz.</p> <p>To reach these values the amplitude thresholds are to be held. (See technical data - chapter 10)</p>
------------------------------------	--

4 General Functions of the Multifunction Counter

Signals:	<p>P1 and P2 are available as relay changeover contacts and electronic output signals (PNP). P0 is available as an electronic output signal across the application output (PNP).</p> <p>If a signal is active, this will be shown on the LCD display. Optionally, the multifunctional counter can be set to have the display flash if one or all the preset values are active.</p> <p>This is also valid for Preset 0 (if no output has been assigned).</p>
Signal time:	<p>1) bistable (latching): Cleared by electronic or manual reset. P 0 + P 1= bistable (latching) – additionally cleared by signal 2 Attention: Signal 2 must not be bistable (latching) for automatic reset.</p> <p>2) monostable (timed): Up to 9 fixed signal times are available between 0.02s and 10s. In addition, user times can be programmed between 0.01s to 599.99s.</p> <p>3) Range signals: active as long as the counter reading is within the adjusted range.</p>
Signals active on/off	<p>During normal operation the relay is energized if the signal is active. This behavior can also be inverted (also applicable to the transistor outputs).</p>
Application input/output:	<p>Depending on the standard function, up to 11 (eleven) functions can be assigned to the application input/output. Note, however, that only one of these functions can be selected. Further details are given in the Function Code Section (5.4).</p>

4 General Functions of the Multifunction Counter

Application – Set to preset 0	<p>Programs the application input to act as a Set Input. The counter is set to Preset 0, independently of the reset via input C or the keyboard.</p> <p>This function is not available for tachometers.</p>
Application keylock:	<p>All keyboard functions can be locked individually (Reset, P 0, P 1, P 2, Prescaler)</p> <p>Lock mode: release after 10s, complete keylock or keylock depending on keylock input (application input)</p>

 **After setting up the system, lock all the keyboard functions you do not want to be changed by the user.**

5 Pulse counter

5.1 Description of the Pulse Counter

(Supplementing the General Functions in Chapter 4)

Counter mode	<p>The following counter modes can be selected: Unidirectional counting, adding or subtracting; Unidirectional counting with directional input; Differential counting, summation (totalizing) or Quadrature x1; x2 or x4.</p>
Output signals mode of operation:	<p>1) coincidence signal: The counter operates in the coincidence mode, i.e. output signals are activated after reaching the Preset value for the programmed period of time.</p> <p>2) Trail: P2 and P0 are under coincidence operation; they operate as described in item A. P1 is the trail. P1 is not absolute to 0, but relative to P2.</p> <p>If the setting is F8=1, the following will apply: Signal 1 is returned at $P2 - P1$ Example: P2=1000, P1=200, Signal 1 at 800; If P1 is negative: P2=1000, P1=(-200), Signal 1 at 1200</p> <p>If the setting is F8=2, the following will be applicable: Signal 1 is returned at $P2 +$ and $- P1$ (Example: P2=1000, P1=200, Signal 1 at 800 or/and 1200)</p> <p>3) range signal: P1 and P2 are range signals: Signal 1 is active at a counter reading $< P1$ and Signal 2 is active at a counter reading $> P2$</p>


5 Pulse counter

Intermediate cut:	Depending on the application it may become necessary to isolate the main signal during the reset, e.g. when the first material lengths or certain lengths showing material defects have to be cut on length-cutting systems.
Additional totalizer (summation counter)	The additional totalizer sums up all values even if the main counter is continually reset. The shift key can be used to switch between the counter reading and the total sum. The totalizer can only be reset manually. To do this, select the total sum from the first row; then press the reset keys.
Prescaler Output PSC-out:	The prescaler output is an application output. With each increase of the counter reading the number of output pulses corresponds to the respective number of increments. The pulse length of the prescaler output corresponds to a frequency of 500 Hz. When using the prescaler output the max. count frequency is: $F_{max} = 500 / PSC$. So it is possible that the maximum input frequency can not be reached.
Application counter input add / sub	The application input may be assigned to the Count Up or Count Down function. This is a counter input, which is available in addition to the counter mode adjusted with F1.
Application Latch/Reset	Latch/Reset is an application input. If the counter is reset via the application input, the counter reading is held constant. The counter continues to remain fully functional and operates in the background mode. During the next reset the current (updated) value will be shown on the display.


5 Pulse counter

5.2 Signal diagrams input signals (PNP-Logic)

Unidirectional counting ($F1 = C G r$) = 0

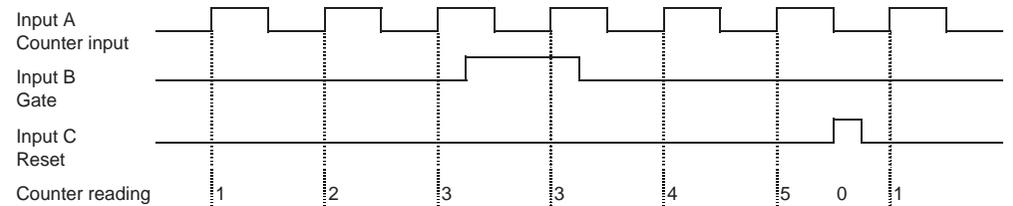


Directional input ($F1 = C d r$) = 1

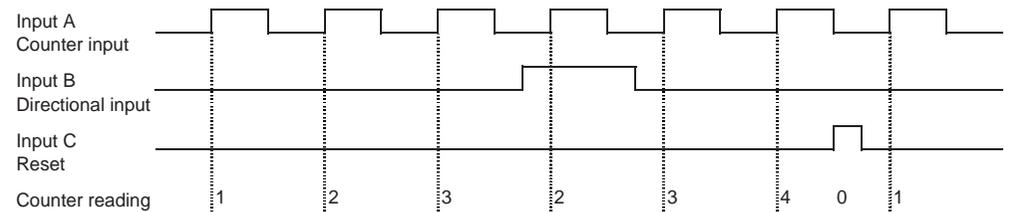


5 Pulse counter

Differential input (F1= A S r) = 3

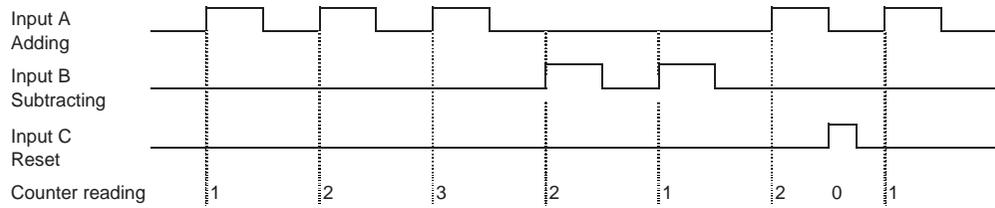


Summation (totalizer) input (F1= A A r) = 5

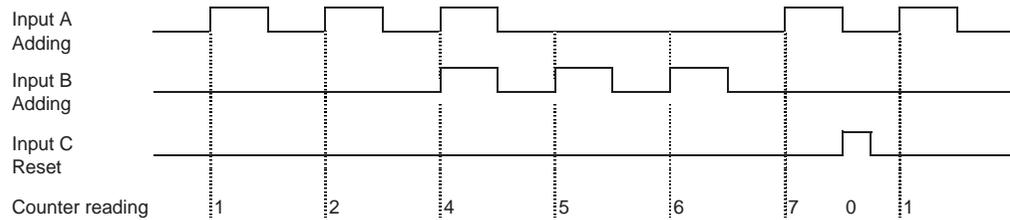

5 Pulse counter


Phase discriminator (F1 = QUAd r) = 6

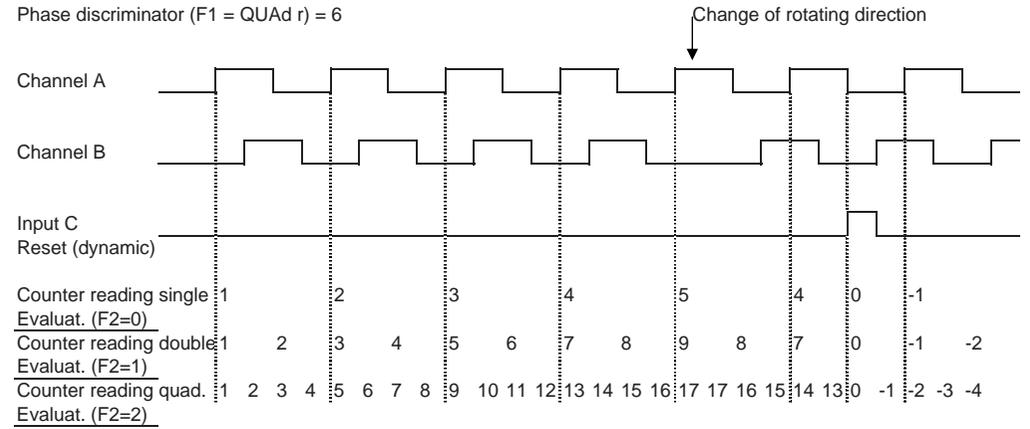

5 Pulse counter


5.3 Signal diagrams - Output signals

Output signals monostable (timed)
Coincidence signals P0 (F10), P1 (F11), P2 (F12) monostable (timed)

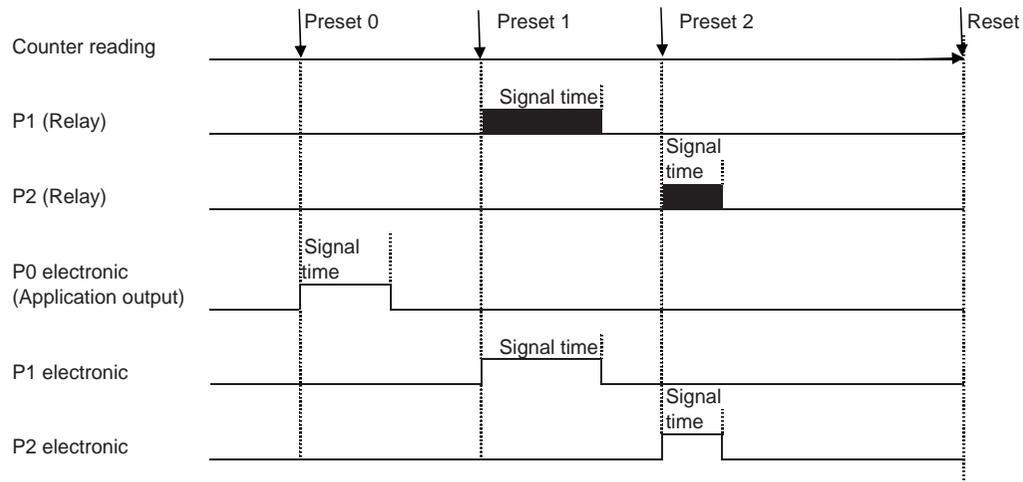


5 Pulse counter

Output signals latching
Coincidence signal time P0 (F10) timed P1 (F11), P2 (F12) latching

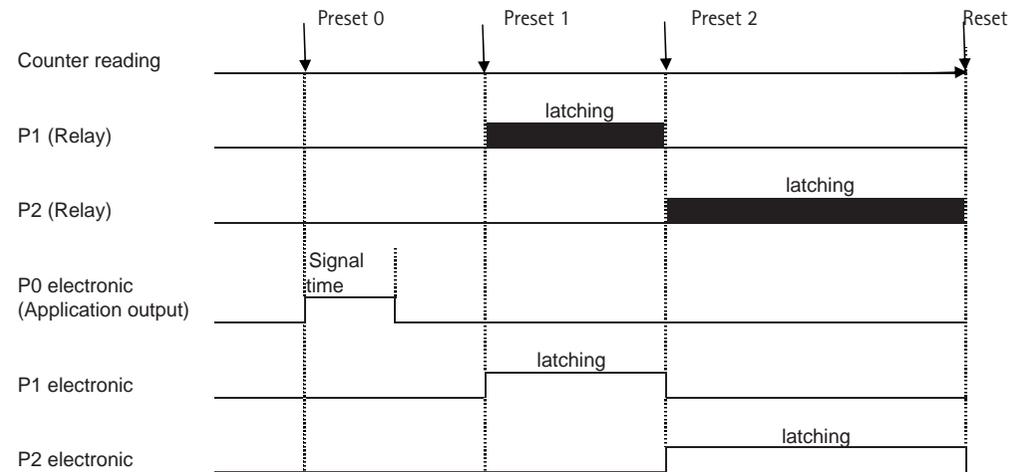


5 Pulse counter

Trail Preset
 P0 (F10) Coincidence signal timed, P1 (F8+F11) trail signal, symmetrical,
 P2 (F12) Coincidence signal timed

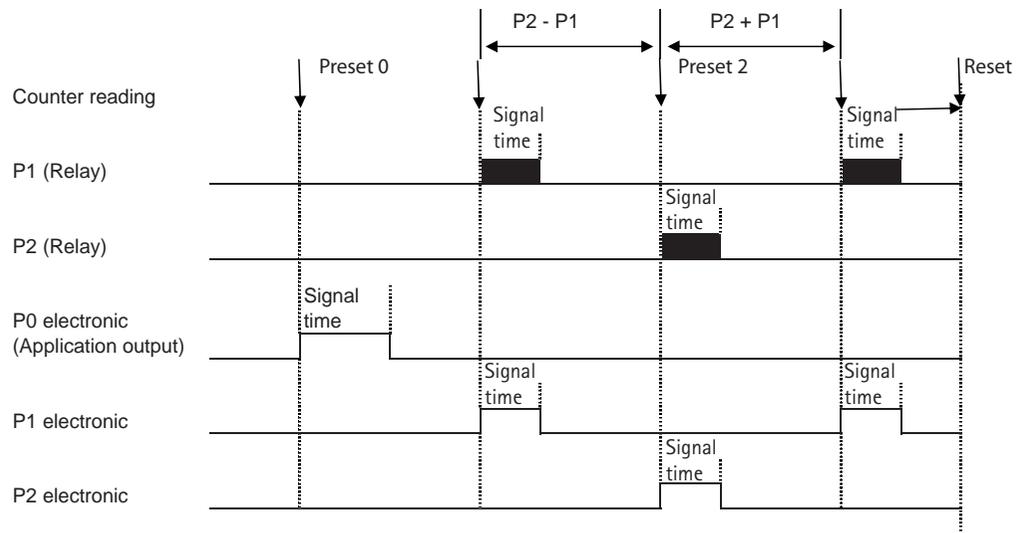

5 Pulse counter

Range signals
 P0 (F10) Coincidence signal timed P1 + P2 range signal

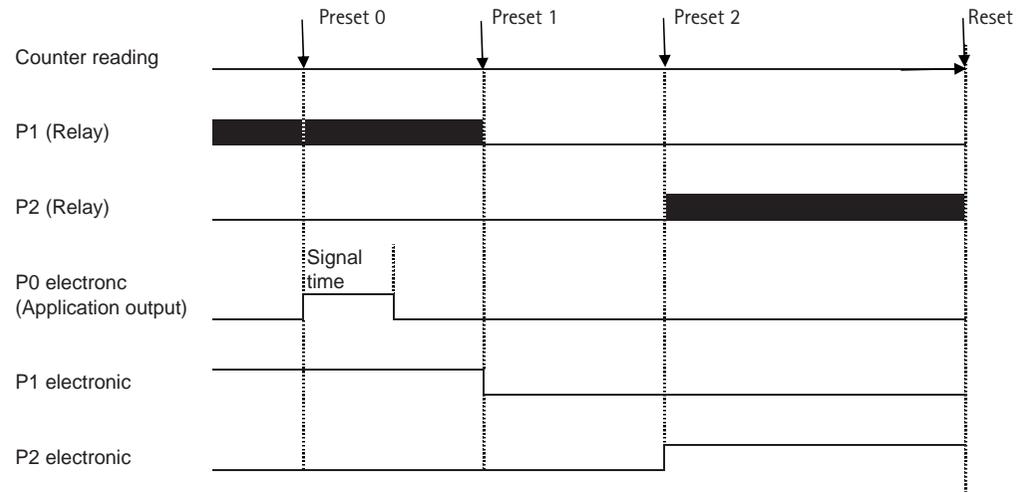

5 Pulse counter

5.4 Programming the counter function codes

<p>Enter Programming mode</p> <p>E + </p> <p>Keep pressed and simultaneously turn Power On</p>	<p>Change function setting</p> <p> or </p> <p>press</p>	<p>Save and change to next function</p> <p></p> <p>press</p>	<p>Return to display mode</p> <p>E</p> <p>press</p>
<p>Alternative display of function codes</p>	<p> + </p>	<p>The function codes are displayed as text in row 1. By pressing both keys simultaneously you can change to the numerical display (F 0 to F 35). After pressing these keys once again the number of the selectable options will be displayed in addition. This setting will be stored.</p>	

5 Pulse counter

Function code	Display Row 1	Function	No.	Display Row 2																			
F0	F 0 0 0 0 0	Factory Setting (Defaults)	0*	0 0 0 0 0 0	No Function																		
			1	0 0 0 0 0 0	All Function Codes are set to the default values marked with *																		
F1	C O U N T E R	Counter Mode	0*	0 0 0 0 0 0	<table border="1"> <thead> <tr> <th>Input A</th> <th>Input B</th> <th>Input C</th> </tr> </thead> <tbody> <tr> <td>Count. inpt.</td> <td>Gate/ Inhibit</td> <td>Reset</td> </tr> <tr> <td>1 0 0 0 0 0</td> <td>Count.inpt.</td> <td>Direction. Input</td> </tr> <tr> <td>2 0 0 0 0 0</td> <td>Count.inpt.</td> <td>Direction. Input</td> </tr> <tr> <td>3 0 0 0 0 0</td> <td>Adding</td> <td>Subtracting</td> </tr> <tr> <td>4 0 0 0 0 0</td> <td>Adding</td> <td>Subtracting</td> </tr> </tbody> </table>	Input A	Input B	Input C	Count. inpt.	Gate/ Inhibit	Reset	1 0 0 0 0 0	Count.inpt.	Direction. Input	2 0 0 0 0 0	Count.inpt.	Direction. Input	3 0 0 0 0 0	Adding	Subtracting	4 0 0 0 0 0	Adding	Subtracting
Input A	Input B	Input C																					
Count. inpt.	Gate/ Inhibit	Reset																					
1 0 0 0 0 0	Count.inpt.	Direction. Input																					
2 0 0 0 0 0	Count.inpt.	Direction. Input																					
3 0 0 0 0 0	Adding	Subtracting																					
4 0 0 0 0 0	Adding	Subtracting																					
			1	0 0 0 0 0 0	Count.inpt.																		
			2	0 0 0 0 0 0	Count.inpt.																		
			3	0 0 0 0 0 0	Adding																		
			4	0 0 0 0 0 0	Adding																		

5 Pulse counter

			5	RRRR.RR	Adding	Adding	Reset
			6	RRRR.RR	Channel A	Channel B	Reset
			7	RRRR.RR	Channel A	Channel B	Gate/ Inhibit
F2	RRRR.RR	Edge Evaluation	0*	RRRR.RR	Single evaluation		
		/Quadrat. evaluation	1	RRRR.RR	Double evaluation		
			2	RRRR.RR	Quadruple evaluation		
F3	RRRR.RR	PNP/NPN-Logic	0	RRRR.RR	NPN 8V-Level		
			1*	RRRR.RR	PNP 8-V Level		
			2	RRRR.RR	NPN TTL-Level		

5 Pulse counter

			3	RRRR.RR	PNP TTL-Level		
F4	RRRR.RR	Input-damping (Attenuation)	0	RRRR.RR	30 Hz damping (e.g. for mechanical contacts)		
			1*	RRRR.RR	F max. (see chapters 4 and 10)		
F5	RRRR.RR	Set / Re-set- Mode	0*	RRRR.RR	Reset to 0		
			1	RRRR.RR	Automatic reset to 0 after reaching Preset 2		
			2	RRRR.RR	Set to Preset 2		
			3	RRRR.RR	Automatic selection of Preset 2 after reaching 0		
F6	RRRR.RR	dynam./static Reset	0*	RRRR.RR	Static reset (reset as long as the signal is applied)		

5 Pulse counter

			1	84n888	Dynamic Reset (ready to count after reset (even if reset signal is applied for a longer time)
F8	88E588	Mode Preset 1	0*	88E588	P1 normal preset; absolute to the counter reading (coincidence signal)
			1	88A888	P1 as a trail preset with prefix (relative to P2)
			2	88A885	P1 as a trail preset symmetrical (relative to P2)
			3	88A888	P1 and P2 as a range signal (Signal 1 < P1, Signal 2 > P2)
F9	00E588	Output signal	o*	88E888	Active On
			1	88E888	Active Off
F10	588888	Signal time PO	0	888888	Disabled / No output signal
			1	888888	Latching, reset with Preset 2 or Reset

5 Pulse counter

			2	888002	0.02 s
			3	888005	0.05 s
			4*	888010	0.10 s
			5	888020	0.20 s
			6	888050	0.50 s
			7	888100	1.00 s
			8	888200	2.00 s
			9	888500	5.00 s
			10	8881000	10.00 s

5 Pulse counter

		11	0500.00	User setting 1 (0-599,99 s)
		12	0500.02	User setting (0-599,99 s)
		13	0500.03	User setting 3 (0-599,99 s)
F11	5000.00	Signal time P 1	0	0050.00 Disabled / No output signal
			1	0150.00 Latching; with Preset 2 or Reset
			2	0000.02 0.02 s
			3	0000.05 0.05 s
			4*	0000.10 0.10 s
			5	0000.20 0.20 s

5 Pulse counter

		6	0000.50	0.50 s
		7	0001.00	1.00 s
		8	0002.00	2.00 s
		9	0005.00	5.00 s
		10	0010.00	10.00 s
		11	0500.00	User setting 1 (0-599.99 s)
		12	0500.02	User setting 2 (0-599.99 s)
		13	0500.03	User setting 3 (0-599.99 s)
F12	5000.00	Signal time P2	0	0050.00 Disabled / No Output signal

5 Pulse counter

1	61.5E88	Latching; Reset Cannot be used in conjunction with automatic Reset
2	88.80.02	0.02 s
3	88.80.05	0.05 s
4*	88.80.10	0.10 s
5	88.80.20	0.20 s
6	88.80.50	0.50 s
7	88.81.00	1.00 s
8	88.82.00	2.00 s
9	88.85.00	5.00 s

5 Pulse counter

10	88.80.00	10.00 s
11	05E7.88	User setting 1 (0-599.99 s)
12	05E7.82	User setting 2 (0-599.99 s)
13	05E7.83	User setting 3 (0-599.99 s)
F13	88.88.88	Decimal point
0*	88.88.80	No decimal point
1	88.88.00	1 decimal place
2	88.80.00	2 decimal places
3	88.00.00	3 decimal places
4	80.00.00	4 decimal places

5 Pulse counter

F14	888888	Display flashes	0*	000000	No flashing
			1	8888P0	Flashes as long as P0 is active
			2	8888P1	Flashes as long as P1 is active
			3	8888P2	Flashes as long as P2 is active
			4	P0P1P2	Flashes as long as any preset is active
F15	2.888888	2 nd row display	0	8888P0	Preset 0
			1	8888P1	Preset 1
			2*	8888P2	Preset 2
			3	8888P50	Prescaler

5 Pulse counter

F16	000000	Output at Reset (Interm. Cut)	4	888888	Totalizer
			0*	8888P2	Do not activate Preset 2 during Reset
F17	P0P1P2	Power On (Reset)	1	8888P2	Activate Preset 2 during Reset
			0*	000000	Restore counter value
F18	000000	Output signal Memory	1	8888P2	Reset at Power On
			0	8888P2	Restart signal time after power failure  output switches
F19	888888	Addtl. Totalizer	1*	8888P2	Do not restart signal time after power failure
			0	8888P2	Enabled
			1*	8888P2	Disabled

5 Pulse counter

F22	APPL INP	Applica. Input/ Output			
0	P50000	Prescaler output			
1	P00000	Output Preset 0			
2	d00000	Directional output			
3*	Cn0000	Counter input - adding			
4	Cn0000	Counter input - subtracting			
5	RESETE	Reset input			
6	GATE000	Gate/Inhibit input			
7	LOCK0000	Keylock input			
8	Hold0000	Hold input (display lock)			

5 Pulse counter

9	TEACH	Teach input (count value becomes P2)
10	SETE000	Set input (Set to Preset 0)
11	LRRES	Latch and Reset (Save display at Reset)



F24 - F27 are applicable to multifunction counters with a USB or Ethernet interface. Consult the supplement included with those versions.

F30	RES000	Lock Reset key	0*	000000	Enable keyboard reset
			1	000000	Keyboard reset locked/delayed
F31	P00000	Lock Preset 0	0*	000000	P0 Setting enabled
			1	000000	P0 Setting locked / delayed

5 Pulse counter

F32	888888	Lock Preset 1	0*	888888	P1 Setting enabled
			1	888888	P1 Setting locked / delayed
F33	828888	Lock Preset 2	0*	888888	P2 Setting enabled
			1	888888	P2 Setting locked / delayed
F34	850088	Lock Prescaler setting	0*	888888	PSC setting enabled
			1	888888	PSC Setting locked / delayed
F35	000088	Lock Mode	0*	10.0000	10 seconds delay
			1	888888	Completely locked
			2	10.0000	Lock depends on keylock input

6 Tachometer

6 Tachometer

6.1 Tachometer Description

(Supplementing the General Functions in Chapter 4)


Operation:	A tachometer measures the period (PNP: time from one rising edge to the next one); NPN: time period from a falling edge to the next one), and converts and displays this time in 1/sec or 1/min.
Tachometer Mode of Operation:	The following modes of tachometer operation can be selected: Unidirectional counting; Unidirectional counting with directional input; Differential counting, summation (totalizing); Quadrature x1; x2 or x4; Indication of ratio A/B and Indication of percentage (A-B) /A in %
Decimal point	Tachometer mode of operation 0-4 (function code F1) The decimal point only serves for better legibility and does not change the value. Tachometer mode of operation 5 & 6 (function code F1) The decimal point is included in the calculation and increases the resolution.

6 Tachometer

Output signals Mode of operation:	The tachometer uses the following limit values: P 1 and P2 are limit (range) signals Output-Signal 1 is active at the displayed value of < P1 and Output-Signal 2 is active at the displayed value of > P2 Output-Signal 0 is active at the displayed value of > P0; (application output)
Display unit:	Programmable: 1/sec or 1/min Using the setting 1/min and prescaler 60 the display will show 1/hour.
Min. input frequency:	Programmable 1 Hz or 0.1 Hz. If two edges do not occur within 1 s or respectively, 10s, a value of 0 will be displayed.
Startup suppression:	Programmable Yes/No During the startup the lower limit signal is suppressed until the lower limit value is exceeded for the first time. The startup suppression will become active again, if the minimum frequency is fallen below.

6 Tachometer

6.2 Signal diagram - Output signals

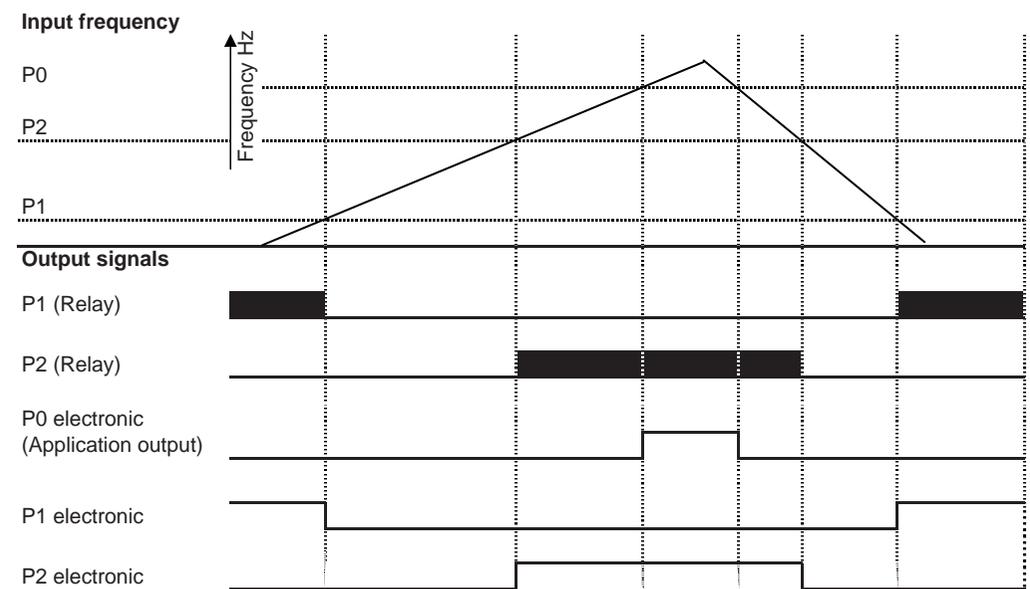

6 Tachometer

6.3 Programming the tachometer function codes

<p>Enter Programming mode</p> <p>E + </p> <p>Keep pressed and simultaneously turn Power On</p>	<p>Change function setting</p> <p> or </p> <p>press</p>	<p>Save and change to next function</p> <p></p> <p>press</p>	<p>Return to display mode</p> <p>E</p> <p>press</p>
<p>Alternative display of Function code:</p>	<p> + </p>	<p>The function codes are displayed as text in row 1. By pressing both keys simultaneously you can change to the numerical display (F 0 to F 35). After pressing these keys once again the number of the selectable options will be displayed in addition. This setting will be stored.</p>	

6 Tachometer

Funktion code	Display Row 1	Function	No.	Display Row 2															
F0	F0E5EE	Factory Setting (Defaults)	0*	8888.08 No function															
			1	888.4E5 All function codes are set to the values marked with *															
F1	E0U8E8	Tacho mode of operation	0*	<table border="1"> <thead> <tr> <th>Input A</th> <th>Input B</th> <th>Input C</th> </tr> </thead> <tbody> <tr> <td>Counter input</td> <td>Gate/Inhibit</td> <td>Hold (Display memory)</td> </tr> <tr> <td>Count input</td> <td>Direct. input</td> <td>Hold (Display memory)</td> </tr> <tr> <td>Adding</td> <td>subtracting</td> <td>Hold (Display memory)</td> </tr> <tr> <td>Adding</td> <td>Adding</td> <td>Hold (Display memory)</td> </tr> </tbody> </table>	Input A	Input B	Input C	Counter input	Gate/Inhibit	Hold (Display memory)	Count input	Direct. input	Hold (Display memory)	Adding	subtracting	Hold (Display memory)	Adding	Adding	Hold (Display memory)
Input A	Input B	Input C																	
Counter input	Gate/Inhibit	Hold (Display memory)																	
Count input	Direct. input	Hold (Display memory)																	
Adding	subtracting	Hold (Display memory)																	
Adding	Adding	Hold (Display memory)																	
			1	888.8H8															
			2	885.8H8															
			3	888.8H8															

6 Tachometer

			4	900000	Channel A	Channel B	Hold (Display memory)
			5	000000	Channel A / Channel B		Hold (Display memory)
			6	000000	(A-B) / A in % (Difference in % of A)		Hold (Display memory)
F2	900000	Edge Evaluation/ Quadrat. evaluation	0*	000000	Single evaluation		
			1	000000	Dual evaluation		
			2	000000	Quadruple evaluation		
F3	000000	PNP/ NPN- Logic	0	000000	NPN 8 V-Level		
			1*	000000	PNP 8 V-Level		

6 Tachometer

			2	000000	NPN TTL-Level		
			3	000000	PNP TTL-Level		
F4	000000	Input damping (Attenuat)	0	000000	30 Hz attenuation (e.g. for mechanical contacts)		
			1*	000000	F max. (see chapter 4 und 10)		
F5	000000	Display Unit	0*	000000	Pulse per second (1/sec)		
			1	000000	Pulse per minute (1/min)		
F6	000000	Min. Input frequency	0*	000000	1 Hz (if no further pulse is received after 1s, the display will return to 0)		
			1	000000	0,1 Hz (if no further pulse is received after 1s, the display will return to 0)		

6 Tachometer

F7	5E85UP	Startup-suppress.	0	8884E5	With startup suppression
			1*	88887a	Without startup suppression
F9	00E580	Output signal	0*	8E880a	Active On
			1	8E80FF	Active Off
F10	5808E0	P0 Addtl. Upper limit	0*	885A6E	Disabled / no Output signal
			1	E8A6EE	Additional range signal > P0
F11	5808E1	P1 Lower limit	0*	885A6E	Disabled / no Output signal
			1	E8A6EE	Range signal < P1

6 Tachometer

F12	5808E2	P2 Upper limit	0*	885A6E	Disabled / no Output signal
			1	E8A6EE	Range signal > P2
F13	88888E	Decimal place	0*	888880	No decimal point
			1	8888.00	1 Decimal place
			2	888.000	2 Decimal places
			3	88.0000	3 Decimal places
			4	8.00000	4 Decimal places
F14	8E8A5H	Display flashes	0*	88E85H	Do not flash

6 Tachometer

		1	8.8.8.8 P0	Flashes as long as P0 active
		2	8.8.8.8 P1	Flashes as long as P1 active
		3	8.8.8.8 P2	Flashes as long as P2 active
		4	P0 P1 P2	Flashes if any preset is active
F15	2.8.0.8.8 E	2 nd row display	0	8.8.8.8 P0 Preset 0
			1	8.8.8.8 P1 Preset 1
			2*	8.8.8.8 P2 Preset 2
			3	8.8.8.8 P50 Prescaler

6 Tachometer

F22	8.8.0.8.8 P	Application Input/Output	0	P0.8.8.8.8	Output Preset 0
			1	d.8.8.8.8.8	Directional output
			2*	0.8.8.8.8.8	Count input adding, or 2nd count input A
			3	0.8.8.8.8.8	Count input subtracting, or 2nd counter input B
			4	0.8.8.8.8.8	Gate/Inhibit Input
			5	H.8.8.8.8.8	Hold-Input (display memory)
			6	E.E.8.8.8.8	Teach Input (count value becomes P2)
			7	L.8.8.8.8.8	Keylock-Input

6 Tachometer



F24 - F27 are applicable to multifunction counters with a USB or Ethernet interface. Consult supplement included with those versions.

F31	P00000	Lock Pre-set 0 Setting	0*	000000	P0 Setting enabled
			1	000000	P0 Setting locked / delayed
F32	P10000	Lock Pre-set 1 Setting	0*	000000	P1 Setting enabled
			1	000000	P1 Setting locked / delayed
F33	P20000	Lock Pre-set 2 Setting	0*	000000	P2 Setting enabled
			1	000000	P2 Setting locked / delayed

6 Tachometer

F34	P50000	Lock Prescaler Setting	0*	000000	PSC Setting enabled
			1	000000	PSC Setting locked / delayed
F35	000000	Lock Mode	0*	100500	10 seconds delay
			1	000000	Completely locked
			2	100000	Lock mode depends on Keylock Input

7 Timer

7 Timer

7.1 Timer Description

(Supplementing the General Functions in Chapter 4)


Function:	The timer counts seconds, minutes or hours. Depending on the resolution (see below) the smallest units to be recorded are 0.1 ms. Combined with the prescaler (see below), quantities can be measured as a function of time.
Time formats:	4 time formats are available: Seconds, minutes, hours and HH:MM:SS
Resolution:	By shifting the decimal place, a resolution of up to 4 decimal places can be programmed; the smallest resolution is 0.1 ms. The time format "seconds with four decimal places" shows 0.1 milliseconds. The time format "seconds with three decimal places" shows milliseconds. The time format "minutes with two decimal places" shows 1/100 minutes.



7 Timer

Prescaler:	During the timer operation the prescaler has to be disabled or set to 01.0000. The prescaler can be used to record quantities, provided that the quantity per time unit is known and constant. Example: A volume of 3 liters per second is supplied. Settings: Time format "seconds", prescaler 3.0000 Display: Supplied volume in liters as a function of time. The prescaler cannot be used with the time format HH:MM:SS as it is not applicable in this application.
Timer mode of operation:	The following modes of timer operation can be selected: Cumulative measurement following the pulse-width measuring principle (Cumulative measurement as long as input A is active) Cumulative measurement following the cycle-duration principle (Cumulative measurement from rising edge Input A to falling edge of Input A) Cumulative measurement A=Run, B=Stop (cumulative measurement from rising edge Input A to rising edge Input B) Single-pulse measurement following the pulse-width measurement principle (Measure as long as Input A is active) Single-pulse measurement following the cycle-duration principle (Measurement from rising edge Input A to rising edge of Input A) Single-pulse measurement A=Run, B=Stop (Cumulative measurement from rising edge Input A to rising edge Input B)
Manual Start / Stop via keyboard:	The Start / Stop function can be set via the keyboard. Start: Press the UP button for 0.5s Stop: Press the DOWN button.

<p>Output signals – Function:</p>	<p>A) coincidence signal: The timer operates in the “coincidence” mode, i.e. the output signals are enabled for the programmed period of time after reaching the selected preset value B) trail signal: P2 and P0 operate in the “coincidence” mode, i.e. the output signals are enabled for the programmed period of time when reaching the selected preset value. P1 is a trail preset and not absolute to 0, but relative to P2. If the setting is F8=1, the following will apply: Signal 1 is returned at P2 – P1 Example: P2=1000, P1=200, Signal 1 at 800; If P1 is negative: P2=1000, P1=(-200), Signal 1 at 1200 If the setting is F8=2, the following will be applicable: Signal 1 is returned at P2 + und – P1 (Example: P2=1000, P1=200, Signal 1 at 800 or/and 1200) C) range signal: P1 and 2 are range signals: Output-Signal 1 is active at timer reading < P1 and Output-Signal 2 is active at timer reading > P2 D) batch mode: The timer can also be programmed to act as a batch counter. In this case, P2= main preset value; P1= Batch preset. In the Batch mode of operation, only positive entries are possible for P1; negative entries will be stored as positive values. This mode is ideal to default a process time and the number of process sequences (runs).</p>
<p>Additional totalizer</p>	<p>The additional totalizer is used to sum up all the times (even after repeated resetting of the main counter). The totalizer is reset separately.</p>

7.2 Signal Diagrams – Input signals

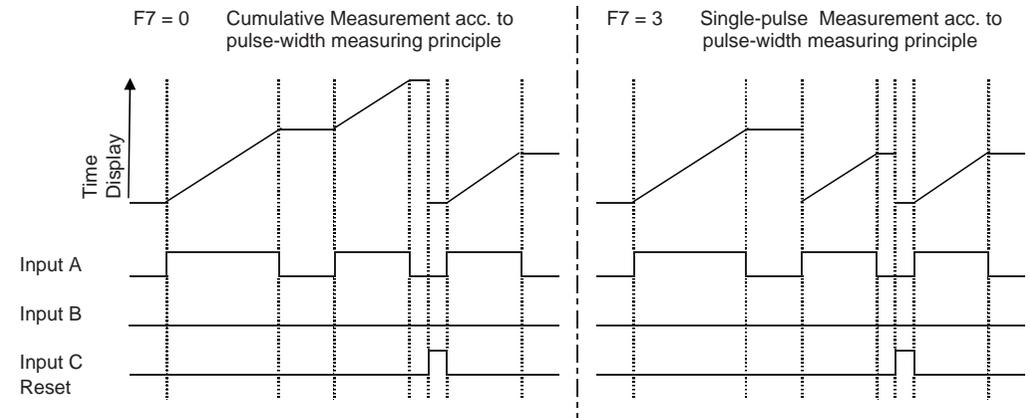

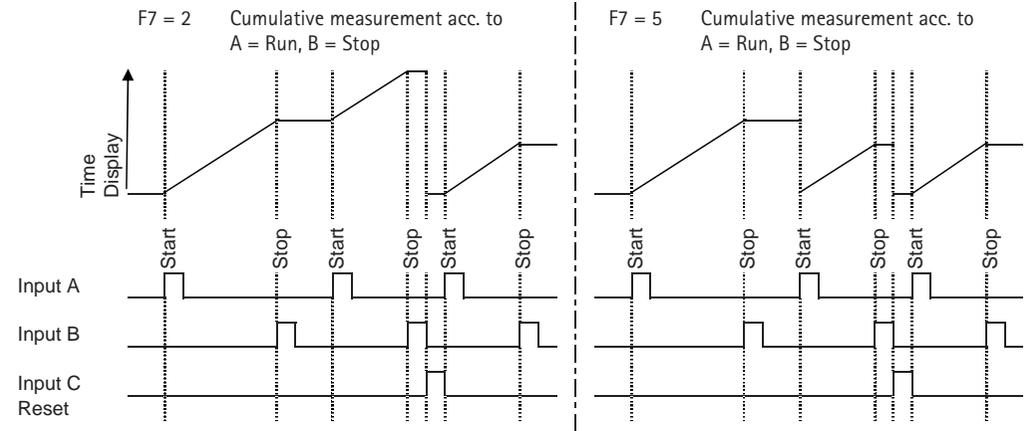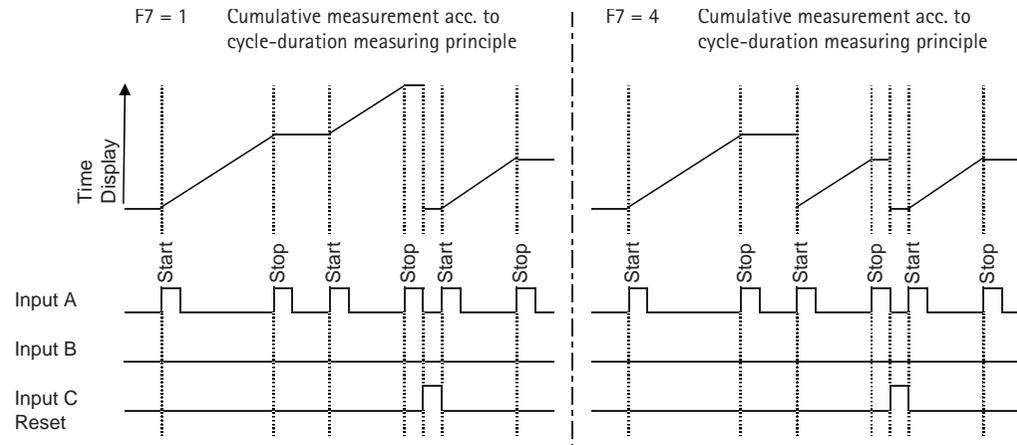

7 Timer

7.3 Signal Diagrams – Output signals

The output signals of the timer can be derived from the pulse counter (see 5.3) or, respectively, batch counter (see 9.2) functions.

7.4 Programming the Timer Function Codes

Enter Programming mode	Change function setting	Save and change to next function	Return to display mode
	 oder 		
Keep pressed and simultaneously turn Power On	press	press	press
Alternative display of function codes	 + 	The function codes are displayed as text in row 1. By pressing both keys simultaneously you can change to the numerical display (F 0 to F 35). After pressing these keys once again the number of the selectable options will be displayed in addition. This setting will be stored.	

7 Timer

Function code	Display Row 1	Function No.	Display Row 2
F0	F0E5EE	Factory Setting (Defaults)	0* 8888n8 No function
		1	888YES All function codes are set to the values marked with *
F1	0n8E88	Time unit	0* 5E28n8 Seconds
		1	n8n8EE Minutes
		2	8H88P5 Hours
		3	HHn8SS HH:MM:SS
F2	FES088	Resolution	0* 888880 No decimal point

7 Timer

	1	8.8.8.8.0	1 decimal place
	2	8.8.8.0.00	2 decimal places
	3	8.8.0.000	3 decimal places
	4	8.0.0.000	4 decimal places
F3		PNP/NPN- Logic	
	0	0.0.0.0.0	NPN 8 V-Level
	1*	0.0.0.0.0	PNP 8 V-Level
	2	0.0.0.0.0	NPN TTL-Level
	3	0.0.0.0.0	PNP TTL-Level

7 Timer

F4		Input (Attenuat)	0	0.0.0.0.0	30 Hz damping (attenuation) (e.g. for mechanical contacts)
			1*	0.0.0.0.0	F max. (see chapter 4 and 10)
F5		Set / Re- set- Mode	0*	0.0.0.0.0	Reset to 0
			1	0.0.0.0.0	Automatic reset to 0 after reaching Preset 2
			2	0.0.0.0.0	Set to Preset 2
			3	0.0.0.0.0	Automatically sets to Preset 2 after reaching 0.
F6		dynam/ static Reset	0*	0.0.0.0.0	Static Reset (as long as the signal is applied)
			1	0.0.0.0.0	Dynamic Reset (ready for operation, even if reset signal has been applied for a longer time)

7 Timer

F7	E88E88	Timer- Mode of Operation	0	E088P00	Cumulative measurement – pulse-width (counts as long as Input A is active)
			1*	E088PEE	Cumulative measurement – cycle duration (counts from rising edge of start signal to rising edge of stop signal).
			2	E088F85	Cumulative measurement – A=Run B=Stop (counts from rising edge of start signal to rising edge of stop signal).
			3	5888P00	Single-pulse measurement – pulse-width (counts as long as Input A is active)
			4	5888PEE	Single-pulse measurement – cycle duration (counts from rising edge of start signal to rising edge of stop signal).
			5	5888F85	Single-pulse measurement – A=Run B=Stop (counts from rising edge of start signal to rising edge of stop signal)
F8	88E588	Mode Preset 1	0*	88E588	P1 normal preset; absolute to counter reading (coincidence signal)

7 Timer

			1	E88800	P1 is a trail preset with prefix (relative to P2)
			2	E88805	P1 is a symmetric trail (relative to P2)
			3	888800	P1 and P2 are range signals (Signal 1 < P1, Signal 2 > P2)
F9	00E580	Output signal	0*	88E808	Active On
			1	88E0FF	Active Off
F10	580800	Signal time P 0	0	885860	Disabled / No output signal
			1	885886	Latching, reset with Preset 2 or Reset
			2	888002	0.02 s

7 Timer

3	8.8.8.0.05	0.05 s
4*	8.8.8.0.10	0.10 s
5	8.8.8.0.20	0.20 s
6	8.8.8.0.50	0.50 s
7	8.8.8.1.00	1.00 s
8	8.8.8.2.00	2.00 s
9	8.8.8.5.00	5.00 s
10	8.8.8.0.00	10.00 s

7 Timer

			11	05E0.00	User setting 1 (0-599.99 s)
			12	05E0.02	User setting 2 (0-599.99 s)
			13	05E0.03	User setting 3 (0-599.99 s)
F11	500000	Signal time P1	0	05A0.00	Disabled / no output signal
			1	05E0.06	Latching, reset with Preset 2 or Reset
			2	8.8.8.0.02	0.02 s
			3	8.8.8.0.05	0.05 s
			4*	8.8.8.0.10	0.10 s

7 Timer

5	8880.20	0.20 s
6	8880.50	0.50 s
7	8881.00	1.00 s
8	8882.00	2.00 s
9	8885.00	5.00 s
10	8810.00	10.00 s
11	0560.00	User setting 1 (0-599.99 s)
12	0560.02	User setting 2 (0-599.99 s)

7 Timer

			13	0560.03	User setting 3 (0-599.99 s)
F12	510000	Signal time P2	0	d85A60	Disabled / No output signal
			1	605E86	Latching; Reset function cannot be used in connection with automatic Reset
			2	8880.02	0.02 s
			3	8880.05	0.05 s
			4*	8880.10	0.10 s
			5	8880.20	0.20 s
			6	8880.50	0.50 s

7 Timer

7	8.8.8.1.00	1.00 s
8	8.8.8.2.00	2.00 s
9	8.8.8.5.00	5.00 s
10	8.8.10.00	10.00 s
11	0.5.0.0.01	User setting 1 (0-599.99 s)
12	0.5.0.0.02	User setting 2 (0-599.99 s)
13	0.5.0.0.03	User setting 3 (0-599.99 s)

7 Timer

F13	P.8.5.0.P	Stop after reaching the main Preset	0*	8.8.8.0.0	No Stop when main Preset is reached (P2)
			1	8.8.8.4.E5	Stop when main Preset is reached (P2)
F14	8.8.0.5.H	Display flashes	0*	0.0.0.5.H	Do not flash
			1	8.8.8.0.P0	Flashes as long as P0 is activ
			2	8.8.8.0.P1	Flashes as long as P1 is active
			3	8.8.8.0.P2	Flashes as long as P2 is active
			4	P.0.0.0.0	Flashes as long as any preset is active
F15	2.8.0.0.0.E	2 nd row display	0	8.8.8.0.P0	Preset 0

7 Timer

			1	8888P1	Preset 1
			2*	8888P2	Preset 2
			3	888P50	Prescaler
			4	000000	Totalizer / Batchcounter
F16	0000SE	Start / Stop via Keyboard (manual)	0*	005000	Start / Stop locked via keys UP key=Start; DOWN key = Stop
			1	000000	Start / Stop enabled via keys UP key =Start; DOWN key =Stop
F17	0000ES	Power-On Reset	0*	0000ES	Restore counter value
			1	8880ES	Reset at Power On

7 Timer

F18	000000	Output Signal Memory	888YES	Restart signal time after power fail ⚠ output switches
			888000	Do not restart signal time after power fail
F19	000000	Addtl. Totalizer	888YES	Enabled
			888000	Disabled
F20	000000	Prescaler	005000	Prescaler not active
			000000	Prescaler active
F21	000000	Timer Type	000000	Preset timer
			000000	Batch timer

7 Timer

F22	PPU00P	Appli- cation Output	0	PO0000	Output Preset 0
			1*	PR0000	Run-Input
			2	SE0P00	Stop-Input
			3	RESR00	Reset counter and totalizer or batch counter
			4	RES000	Reset - only counter
			5	RES000	Reset - only totalizer or batch counter
			6	000000	Keylock input
			7	H00000	Hold input (display memory)

7 Timer

8	EE0000	Teach Input (count value becomes P2)
9	SE0000	Set Input (set to Preset 0)



F24 - F27 are applicable to multifunction counters with a USB or Ethernet interface. Consult the supplement included with those versions.

F30	RES000	Lock Reset Key	0*	000000	Keyboard reset enabled
			1	000000	Keyboard reset locked / delayed
F31	PO0000	Lock Pre- set 0 Set- ting	0*	000000	P0 Setting enabled
			1	000000	P0 Setting locked / delayed

7 Timer

F32		Lock Pre-set 1 Setting	0*		P1 Setting enabled
			1		P1 Setting locked / delayed
F33		Lock Pre-set 2 Setting	0*		P2 Setting enabled
			1		P2 Setting locked / delayed
F34		Lock Prescaler Setting	0*		PSC Setting enabled
			1		PSC Setting locked / delayed
F35		Lock Mode	0*		10 seconds delay
			1		Completely locked
			2		Lock function depending on Keylock input

8 Shift Counter

8 Shift Counter

8.1 Shift Counter Description

(Supplementing the general description under 4)


Function:	2-shift counters enable the acquisition of 2 separate partial sums. Counter input A acts on partial sum 1, whereas counter input B acts on partial sum 2. Both partial sums are counted positively; the total sum is calculated mathematically and corresponds to the summed-up total (or respectively, the difference) of the partial sums. The total sum remains unchanged after resetting one of the partial sums.
Counter mode of operation:	The following counter modes of operation can be selected: Difference counting and summation (totalizing)
Output signals – mode of operation:	The counter operates in the "coincidence" mode, i.e. the output signals are enabled for the programmed period of time after reaching the selected Preset value. The total sum acts on Preset 0 Partial sum 1 acts on Preset 1 Partial sum 2 acts on Preset 2

8 Shift Counter

Reset	<p>After a reset at input C, both partial sums and the total sum are reset.</p> <p>When resetting via the application input it is possible to reset one or both of the partial sums or the total sum, depending on the selected programming.</p> <p>When resetting via the keyboard, only the value shown on the display is reset.</p>
Totalizer	The totalizer sums up all the input pulses, even if the partial sums and the total sum are reset. The totalizer can only be reset manually.

8.2 Scrolling between Total Sum and Partial Sums


The Shift key is used to scroll between the total sum and partial sums 1 and 2. If a partial sum is shown, SU1 or SU2 will flash in the lower display bar.

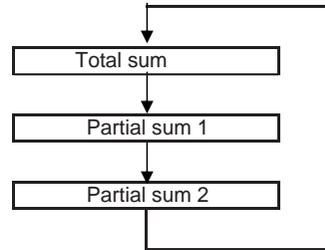

8 Shift Counter


8.3 Signal diagrams - Inputs (PNP Logic)

Adding/Adding (F1= A A r)

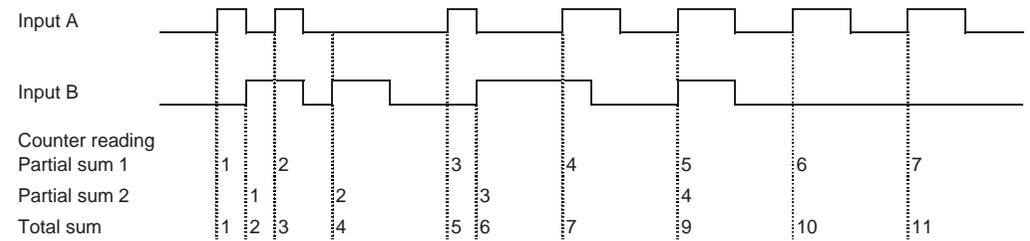

8 Shift Counter

Adding/Subtracting (F1= A S r)

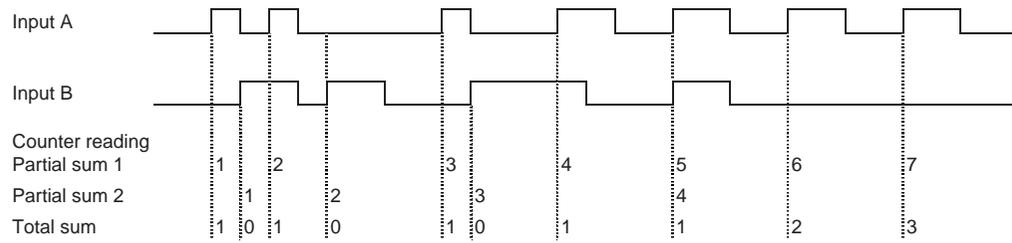


8 Shift Counter

8.4 Signal Diagrams - Output signals

Output signals - timed

Coincidence signals P 0/Total Sum (F10), P 1/Partial sum 1 (F11), P 2/Partial sum 2 (F12) timed

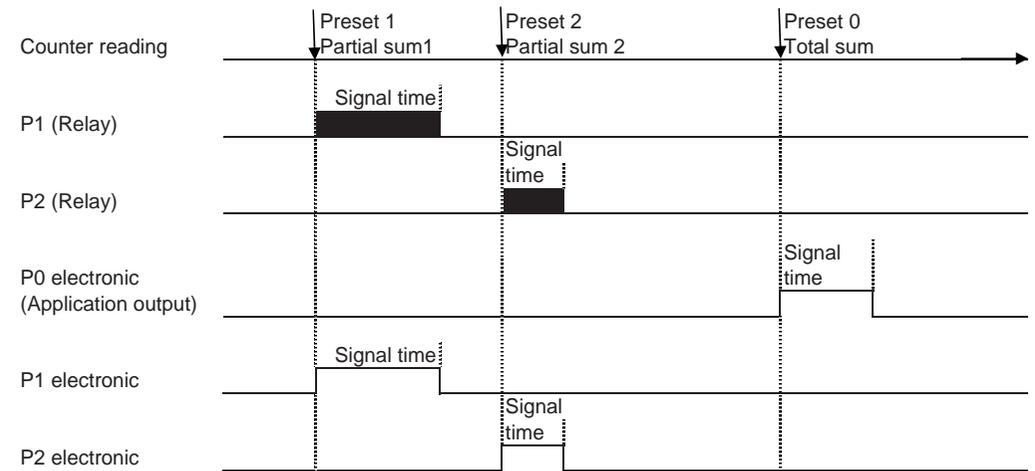

8 Shift Counter

8.5 Programming the Shift Counter Function Codes

Enter Programming mode	Change function setting	Save and change to next function	Return to display mode
Keep pressed and simultaneously turn Power On	press	press	press
Alternative display of Function codes		The function codes are displayed as text in row 1. By pressing both keys simultaneously you can change to the numerical display (F 0 to F 35). After pressing these keys once again the number of the selectable options will be displayed in addition. This setting will be stored.	

8 Shift Counter

Function code	Display Row 1	Function No.	Display Row 2
F0	F0E5EE	Factory Setting (Defaults)	0* 888.888 No function
		1 888.9E5 All function codes are set to the values marked with *	
F1	COUNT	Counter mode of Operation	Input A Input B Input C
		0 885.888 Adding Subtracting Reset	
		1* 888.888 Adding Adding Reset	
F3	PNP/NPN-Logic	0 888.888 NPN 8 V-Level	

8 Shift Counter

			1*	PNP 8 V-Level
			2	NPN TTL-Level
			3	PNP TTL-Level
F4	Input Attenuat.	0	30 Hz damping (attenuation); e.g. for mechanical contacts	
		1*	F max. (see chapter 4 and 10)	
F5	With / without Preset	0	With Preset	
		1*	Without Preset	

8 Shift Counter

F6	Dynamic/ static Reset	0*	Static Reset (reset as long as signal is applied)
		1	Dynamic Reset (ready for counting, even if reset signal has been applied for a longer time)
F9	Output signal	0*	Active On
		1	Active Off
F10	Signal time P O Total Sum	0	Disabled / no output signal
		1	Latching; reset with Reset
		2	0.02 s
		3	0.05 s

8 Shift Counter

4*	8.8.8.0.10	0.10 s
5	8.8.8.0.20	0.20 s
6	8.8.8.0.50	0.50 s
7	8.8.8.1.00	1.00 s
8	8.8.8.2.00	2.00 s
9	8.8.8.5.00	5.00 s
10	8.8.10.00	10.00 s
11	0.5.0.0.0.0	User setting 1 (0-599.99 s)

8 Shift Counter

			12	0.5.0.0.0.2	User setting 2 (0-599.99 s)
			13	0.5.0.0.0.3	User setting 3 (0-599.99 s)
F11	5.8.0.8.8.8	Signal time P1 Partial sum 1	0	8.8.5.8.8.0	Disabled / no output signal
			1	8.8.5.8.8.6	Latching; reset with Reset
			2	8.8.8.0.0.2	0.02 s
			3	8.8.8.0.0.5	0.05 s
			4*	8.8.8.0.1.0	0.10 s
			5	8.8.8.0.2.0	0.20 s

8 Shift Counter

6	8880.50	0.50 s
7	8881.00	1.00 s
8	8882.00	2.00 s
9	8885.00	5.00 s
10	8810.00	10.00 s
11	0560.88	User setting 1 (0-599.99 s)
12	0560.82	User setting 2 (0-599.99 s)
13	0560.83	User setting 3 (0-599.99 s)

8 Shift Counter

F12	580822	Signal time P2 Partial sum 2	0	885860	Disabled / no output signal
			1	615886	Latching; reset with Reset
			2	8880.02	0.02 s
			3	8880.05	0.05 s
			4*	8880.10	0.10 s
			5	8880.20	0.20 s
			6	8880.50	0.50 s
			7	8881.00	1.00 s

8 Shift Counter

8	888200	2.00 s
9	888500	5.00 s
10	888000	10.00 s
11	0500.00	User-Einstellung 1 (0-599.99 s)
12	0500.02	User-Einstellung 2 (0-599.99 s)
13	0500.03	User-Einstellung 3 (0-599.99 s)

F13	0000.00	Decimal Point	0*	8888.00	No decimal point
			1	8888.00	1 decimal place

8 Shift Counter

2	888000	2 decimal places
3	880000	3 decimal places
4	800000	4 decimal places

F14	0000.00	Display flashes	0*	0000.00	Do not flash
			1	8888.P0	Flashes as long as P0 is active
			2	8888.P1	Flashes as long as P1 is active
			3	8888.P2	Flashes as long as P2 is active
			4	P000.00	Flashes if any Preset is active

8 Shift Counter

F15	2.8.0.0.0.E	2 nd row display	0	8.8.8.8.P.0	Preset 0
			1	8.8.8.8.P.1	Preset 1
			2*	8.8.8.8.P.2	Preset 2
			3	8.8.8.P.5.0	Prescaler
			4	8.8.8.5.0.1	Partial sum 1
			5	8.8.8.5.0.2	Partial sum 2
			6	8.8.8.E.0.E	Totalizer

8 Shift Counter

F17	P.0.N.F.E.S	Power-On Reset	0*	0.8.8.8.E.S	Restores the counter value
			1	8.8.8.F.E.S	Reset at Power On
F18	0.V.E.N.E.N	Output Signal Memory	0	8.8.8.Y.E.S	Restart signal time after power fail  output switches
			1*	8.8.8.0.0	Do not restart signal time after power fail
F19	A.0.0.E.0.E	Addtl. Totalizer	0	8.8.8.Y.E.S	Additional totalizer is enabled
			1*	8.8.8.0.0	No additional totalizer
F22	A.P.0.0.N.P	Appli-cation Input/Output	0	P.0.0.0.0.E	Output Preset value 0
			1*	A.2.8.0.P	2nd counter input partial sum 1

8 Shift Counter

2	628888	2nd counter input partial sum 2
3	6E5851	Reset of partial sum 1
4	6E5852	Reset of partial sum 2
5	6E5582	Reset of both partial sums
6	6E5E8E	Reset of total sum
7	H88888	Hold Input (display memory)
9	888888	Keylock Input



F24 - F27 are applicable to multifunction counters with a USB or Ethernet interface. Consult the supplement included with those versions.

8 Shift Counter

F30	6E508E	Lock Reset key	0*	888888	Keyboard reset enabled
			1	888888	Keyboard reset locked / delayed
F31	P0888E	Lock Preset 0	0*	888888	P0 Setting enabled
			1	888888	P0 Setting locked / delayed
F32	P1888E	Lock Preset 1	0*	888888	P1 Setting enabled
			1	888888	P1 Setting locked / delayed
F33	P2888E	Lock Preset 2	0*	888888	P2 Setting enabled
			1	888888	P2 Setting locked / delayed

8 Shift Counter

F34	850000	Lock Prescaler Setting	0*	000000	PSC Setting enabled
			1	000000	PSC Setting locked / delayed
F35	000000	Lock Mode	0*	100500	10 seconds delay
			1	000000	Completely locked
			2	100000	Lock mode depends on keylock input

9 Batch Counter

9 Batch Counter

9.1 Batch Counter Description

(Supplementing the general description in Chapter 4)

Function:	<p>Preset 2 is the main Preset setting. Preset 1 is the Batch Preset or, respectively, the preset value of the 2nd totalizer.</p> <p>In the batch operation the batch counter counts how often the main Preset is activated. Example of an application: during length cutting operations, for example, both the lengths (main preset) and number (batch preset) can be monitored. In the Batch mode of operation, only positive entries are possible for P1; negative entries will be stored as positive values.</p>
Counter mode of operation:	<p>The following modes of operation can be adjusted for the counter: Unidirectional counting, adding or subtracting; Unidirectional counting with directional input; Difference counting, summation and Quadrature x1; x2 or x4.</p>
Output signals Mode of Operation:	<p>The counter operates in the coincidence mode, i.e. the output signals are enabled for the programmed duration when the selected preset value is reached.</p>

9 Batch Counter

Prescaler Output PSC-out:

The Prescaler output is an application output.

With each increase of the counter reading the number of output pulses corresponds to the respective number of increments.

The pulse length of the prescaler output corresponds to a frequency of 500 Hz.

When using the prescaler output the max. input frequency is:


$$F_{max} = 500 / PSC.$$

So it is possible that the maximum input frequency can not be reached.

9 Batch Counter

9.2 Signal Diagrams - Inputs and Outputs

Unidirectional count (F1 = C G r), Batch counter (F19 = batch),
Preset 2 (Main Preset = 5, Preset 1 (Batch Preset) = 3

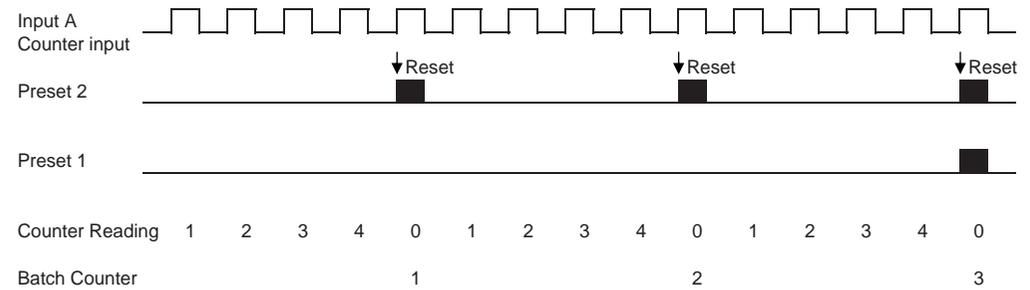

9 Batch Counter

9.3 Programming the Batch Counter Function Codes

Enter Programming mode	Change function setting	Save and change to next function	Return to display mode
 + 	 or 		
Keep pressed and simultaneously turn Power On	press	press	press
Alternative display of Function codes	 + 	The function codes are displayed as text in row 1. By pressing both keys simultaneously you can change to the numerical display (F 0 to F 35). After pressing these keys once again the number of the selectable options will be displayed in addition. This setting will be stored.	

9 Batch Counter

Function code	Display Row 1	Function	No.	Display Row 2	
F0	F0E5EE	Factory Setting (Defaults)	0*	888800	No function
			1	888YES	All function codes are set to the values marked with *
F1	COUNT8	Counter Mode of Operation	0*	00000	Input A: Subtracting, Input B: Gate/Inhibit, Input C: Reset
			1	00000	Count Input, Directional input, Reset
			2	00000	Count Input, Directional input, Gate/Inhibit
			3	88500	Adding, Subtracting, Reset
			4	88500	Adding, Subtracting, Reset

9 Batch Counter

			5	888888	Adding	Adding	Reset
			6	908888	Channel A	Channel B	Reset
			7	908880	Channel A	Channel B	Gate/Inhibit
F2	908888	Edge Evaluation Quadrat. Evaluation	0*	888881	Single evaluation		
			1	888882	Double evaluation		
			2	888884	Quadruple evaluation		
F3	888880	PNP/ NPN-Logic	0	000008	NPN 8 V-Level		
			1*	000008	PNP 8 V-Level		

9 Batch Counter

			2	000008	NPN TTL-Level		
			3	000008	PNP TTL-Level		
F4	888888	Input damping (Attenuat)	0	000009	30 Hz damping (e.g. for mechanical contacts)		
			1*	000009	F max. (see chapter 4 and 10)		
F5	050008	Set / Re-set- Mode	0*	000000	Reset to 0		
			1	000000	Automatic reset to 0 when Preset value 2 is reached		
			2	500002	Sets to Preset value 2		
			3	050002	Automatic setting to Preset 2 after reaching 0		

9 Batch Counter

F6	8.8.8.8.8.8	Dynamic/ static Reset	0*	5.8.8.8.8.8	Static Reset (reset as long signal is applied)
			1	8.8.8.8.8.8	Dynamic Reset (ready for counting after reset, even if reset signal has been applied for a longer time)
F9	0.0.8.8.8.0	Output signal	0*	8.8.8.8.0.8	Active On
			1	8.8.8.0.8.8	Active Off
F10	5.8.8.8.8.0	Signal time P 0	0	8.8.8.8.8.8	Disabled / no output signal
			1	8.8.8.8.8.8	Latching; reset with Preset 2 or Reset
			2	8.8.8.0.0.2	0.02 s
			3	8.8.8.0.0.5	0.05 s

9 Batch Counter

4*	8.8.8.0.1.0	0.10 s
5	8.8.8.0.2.0	0.20 s
6	8.8.8.0.5.0	0.50 s
7	8.8.8.1.0.0	1.00 s
8	8.8.8.2.0.0	2.00 s
9	8.8.8.5.0.0	5.00 s
10	8.8.8.0.0.0	10.00 s
11	0.5.8.8.8.8	User-setting 1 (0-599.99 s)

9 Batch Counter

			12	0500.02	User-setting 2 (0-599.99 s)
			13	0500.03	User-setting 3 (0-599.99 s)
F11	500000	Signal time P1 Batch-Preset	0	005000	Disabled / no output signal
			1	615000	Latching; reset with Reset
			2	0000.02	0.02 s
			3	0000.05	0.05 s
			4*	0000.10	0.10 s
			5	0000.20	0.20 s

9 Batch Counter

			6	0000.50	0.50 s
			7	0001.00	1.00 s
			8	0002.00	2.00 s
			9	0005.00	5.00 s
			10	0010.00	10.00 s
			11	0500.00	User-setting 1 (0-599.99 s)
			12	0500.02	User-setting 2 (0-599.99 s)
			13	0500.03	User-setting 3 (0-599.99 s)

9 Batch Counter

F12	580822	Signal time P2	0	885860	Disabled / no output signal
			1	885888	Latching; reset with Reset Cannot be used in connection with automatic Reset
			2	888002	0.02 s
			3	888005	0.05 s
			4*	888010	0.10 s
			5	888020	0.20 s
			6	888050	0.50 s
			7	888100	1.00 s

9 Batch Counter

			8	888200	2.00 s
			9	888500	5.00 s
			10	888000	10.00 s
			11	USE000	User-setting 1 (0-599.99 s)
			12	USE002	User-setting 2 (0-599.99 s)
			13	USE003	User-setting 3 (0-599.99 s)

F13	888888	Decimal point	0*	888880	No decimal point
			1	888800	1 decimal place

9 Batch Counter

			2	8.8.8.0.00	2 decimal places
			3	8.8.0.0.00	3 decimal places
			4	8.0.0.0.00	4 decimal places
F14	8.FLASH	Display flashes	0*	0.8.FLASH	Do not flash
			1	8.8.8.8.P0	Flashes as long as P0 is active
			2	8.8.8.8.P1	Flashes as long as P1 is active
			3	8.8.8.8.P2	Flashes as long as P2 is active
			4	P0.8.8.8.2	Flashes if any Preset is active

9 Batch Counter

F15	2.8.0.8.8E	2 nd row display	0	8.8.8.8.P0	Preset 0
			1	8.8.8.8.P1	Preset 1
			2*	8.8.8.8.P2	Preset 2
			3	8.8.8.P50	Prescaler
			4	8.8.8.2.0	Batch counter or 2nd counter
F16	8.8.8.8.8	External Reset signal	0	8.E.8.8.8	Only resets the counter
			1	8.E.8.8.8	Only resets the batch counter
			2*	8.E.8.8.8	Resets all counters

9 Batch Counter

F17	P0N0E5	Power On Reset	0*	0880E5	Restores the counter value
			1	8880E5	Reset at Power On
F18	0VENE0	Output signal-Memory	0	8884E5	Restart signal time after power fail  output switches
			1*	888800	Do not restart signal time after power fail
F19	68E2H0	Batch-Counter or 2nd totalizer	0*	68E2H0	Batch counter
			1	2802E8	2nd totalizer
F22	880000	Application input/output	0	850000	Prescaler output
			1	800000	Output Preset 0

9 Batch Counter

2	800000	Directional count output
3*	08E800	Count input, adding
4	08E800	Count input, subtracting
5	8E5A00	Reset counter and Batch counter or 2nd totalizer
6	8E5000	Resets only counter
7	8E5800	Resets only Batch counter or 2nd totalizer
8	08E000	Gate/Inhibit input
9	000000	Keylock input

9 Batch Counter

10	H 0000.00	Hold input (display memory)
11	TEACH	Teach input Count value becomes P2
12	SE 0000.00	Set-input (sets to Preset 0)



F24 - F27 are applicable to multifunction counters with a USB or Ethernet interface. Consult the supplement included with those versions.

F30	EE5000	Lock Re-set key	0*	000000	Keyboard reset enabled
			1	000000	Keyboard reset locked / delayed

F31	P00000	Lock Preset 0 Setting	0*	000000	P0 Setting enabled
			1	000000	P0 Setting locked / delayed

9 Batch Counter

F32	P10000	Lock Preset 1 Setting	0*	000000	P1 Setting enabled
			1	000000	P1 Setting locked / delayed

F33	P20000	Lock Preset 2 Setting	0*	000000	P2 Setting enabled
			1	000000	P2 Setting locked / delayed

F34	P50000	Lock Prescaler Setting	0*	000000	PSC Setting enabled
			1	000000	PSC Setting locked / delayed

F35	000000	Lock Mode	0*	100500	10 seconds delay
			1	000000	Completely locked
			2	100000	Lock mode depends on Keylock input

10 Technical Data

10 Technical Data

General

Display	LCD reflective, Transflective Positive: black figures on back lit background Transmissive Negative: white, red or green figures on black background 2 lines, counter reading/presettings 6-digits; decimal point (up to 4 decimals)
Digit hight	1st line 9.3 mm = 0.37"; 2nd line 7.2 mm = 0.28"
Supply voltage	SELV: 12-30 VDC; protected against polarity reversal SELV: 24 VAC, 50/60 Hz, $\pm 10\%$ 115 VAC; 230 VAC, 50/60 Hz, $\pm 10\%$ 90-260 VAC; 50/60 Hz
Current consumption	12 - 30 VDC < 200 mA, 24 VAC < 250 mA; including sensor supply 115/230 VAC < 50 mA; incl. sensor supply 90 - 260 VAC < 400 mA; incl. sensor supply
Power consumption	< 5 W
Duty cycle	100%
Overload protection	external fuse DC: 0.16 AT (IEC 127); DC: 0.2 AT (UL 198) 24 VAC: 315 mA T; 230 VAC: 32 mA T; 115 VAC: 63 mA T

10 Technical Data

Overload protection	external fuse 230 V, 2,5 mA T
Relay output	
Sensor supply	Only for AC operation: 12-24 VDC load-dependent; max. 50 mA
Storage of values	NV-memory > 10 years
Electrical connections	Plug-in screw-type connections / Terminals
Cable cross-section	1...1.5 mm ² with wire-end sleeves
Amplitude threshold	< 2 V and > 8 V or < 1 V and > 4 V at TTL-level amplitude max. 40 VDC
Active edge	programmable positive for PNP-input, negativ for NPN-input
Input resistance	approx. 10 kOhm
Count frequency	max. 60 kHz (TTL 15 kHz): single-channel counting max. 60 kHz (TTL 15 kHz): Different. counting and totalizing channel (A+B together) max. 30 kHz (TTL 15 kHz): Quadrature x1 or x2 max. 15 kHz (TTL 15 kHz): Quadrature x4 damped (attenuated) 30 Hz
Pulse form	any desired form (at max. frequency square 1:1)
Pulse duration min.	17 ms (30 Hz); 8 μ s (60 kHz)
Prescaler	0.0001 - 99.9999
Reset	manual reset via keyboard, external reset static or dynamic programmable; pulse length min. 5 ms,

10 Technical Data

	automatic reset after reaching Preset 2, (No pulse losses at max. counter frequency due to automatic reset function). via application input (programmable) and programmable Power-On Reset
Set function	Setting to Preset 0 (independent of reset)
Display and Preset Range	- 999 999 up to + 999 999
Warning signal	Display flashes when preset 0, 1 or 2 are active
Signal times	0.01 s to 599.99 s or latching programming; tolerance +/- 10ms; active On or Off
Relay Output for P1 and P2	Change-over contact max. 250 VAC / 30 VDC / 5 A Change-over contact min. 5 VAC / 5 VDC / 10 mA delay < 10 ms
Transistor Output for P1 and P2	PNP-output 12 - 30 VDC max. 50 mA at DC-supply 12 - 24 VDC max. 30 mA at AC-supply (24/115/230 VAC) 12 - 24 VDC, max 50 mA at AC-supply with switching power supply
Application Output	PNP-output 12 - 30 VDC max. 20 mA at DC supply 12 - 24 VDC max. 20 mA at AC supply (24/115/230 VAC)



Current load of the outputs (Sensor 12-24 VDC, Out 1, Out 2, Application-Output) is not allowed to exceed 65 mA in sum.

10 Technical Data

Counter

Counter mode of operation Input A,B	Unidirectional; adding or subtracting; directional input; Differential operation, add / sub; Summation (Totalizing) add / add; Quadrature x1; x2 or x4
Control Input	Reset; Gate/Inhibit
Preselect Mode	Absolute or trail, Range signal /limit values (signal 1 < P1, signal 2 > P2)
Application Input/Output	Output: Prescaler-out, Preset 0-out, Direction-out Input: addtl. counter input add / sub, Reset, Set, Gate, Keylock, Hold, Teach in

Batch Counter

Mode	Batch counter with Preset or 2nd totalizer with Preset
------	--

Shift Counter

Counter Mode of Operation	Differential counting add/sub, totalizing add/add
---------------------------	---

Tachometer

Measuring Principle	Period (cycle) measurement (1/Tau)
Time base	1/min or 1/s

10 Technical Data

Min. frequency	1 Hz or 0.1 Hz
Limit values	2 alarms with programmable startup suppression + 1 additional upper limit value on the application output
Tachometer mode of operation	Unidirectional add oder sub; directional input; Differential add / sub; totalizing add / add; Quadrature x1; x2 or x4 A / B or (A-B) / A %
Application Input/Output	Output: Preselect 0-out, Direction-out Input: addtl. counter input add / sub, Keylock, Hold, Teach in
Accuracy of the tachometer function	Time base: ± 30 ppm Measuring principle: Periodic measurement Measuring time: min. 0.5s / max. 1s oder 10s Measuring resolution: 0.4 μ s (<30 ppm) Display resolution: 4 decimal places, 1 Digit = 100 ppm
Overall tolerance	= Shown resolution + tolerance of timebase = 130 ppm

Timer

Measuring Principle	Pulse-width or cycle duration measurement Start Inp. A + Stop Inp. B; Start/Stop key
Time base	Programmable in sec, min, h or hh.mm.ss
Resolution	1; 0.1; 0.01; 0.001; 0.0001

10 Technical Data

Function	Single-pulse or cumulative measurement
Application Input/Output	Output: Preselect 0-out Input: addtl. Run, Stop, Reset, Set, Keylock, Hold, Teach in
Accuracy of the timer	Time base: ± 30 ppm Start / Stop-point in time: 16 μ s / 16 ms (not damped / damped) Resolution: 100 μ s = 100 ppm
Total tolerance	= Shown resolution + tolerance of timebase = 130 ppm

Environment. cond. Safety Rules

General design	EN 61 010 / IEC 61010-1
Protection Class	II; EN 61010-1 / IEC 61010-1
Pollution degree	V 2, EN 50178
EMC - Interference immunity	EN 61326-1 industrial environment *
EMC - Emission	EN 61326-1 Class B *
Ambient temperature	0°C - 50°C (32 - 122 F) EN 60 068-2-1/2
Storage temperature	- 20°... + 65°C (-4 - 149 F) EN 60 068-2-1/2
Climate	40°C (104 F) / 93% rel hum. class 4K4H, EN 60 068-2-78 25 - 50°C (77 - 122 F) / 93% rel hum., cyclic, EN 60 068-2-38
Degree of protection	IP 65 front side; EN 60529

10 Technical Data

	IP 20 terminals
Vibration resistance	10 m/s ² (32.8 ft/s ²) (10 ... 150 Hz); IEC 60 068-2-6
Shock resistance	100 m/s ² (328 ft/s ²) (18 ms); IEC 60 068-2-27
Resistance to chemicals	Frontfoil acc. to DIN 42 115-2
Approvals	UL, CSA; File No.: E 338588
RoHS	compliant

Mechanical Data

Installation	Front-panel installation with tenter (frame) Front panel thickness max. 11 mm (0.43 ")
Dimensions	48 mm x 48 mm x 118 mm (1.89 " x 1.89 " x 4.65 "), installation depth 110 mm (4.33 ") DIN 43700
Front-panel cutout	45 mm x 45 mm + 0.3 mm (1.77 " x 1.77 " x 0.01 ")
Weight	approx. 200 g (7 oz)

* For cable length > 30 m, for connection to a DC-supply-network and input level TTL an additional protection circuit is necessary.

11 Transport, Packaging, Storage / 12 Maintenance and cleaning

11 Transport, Packaging, Storage



**Note! Damage may be caused by improper transport!
Improper transport may cause considerable damage.
Do not remove packaging before assembly and installation.**

The packaging offers protection against mechanical damage and loss of parts such as the plugs or operating instructions. Therefore, do not take the multifunctional counter out of its packaging until you actually have to start your assembly and installation work.

Inspect the shipment for completeness and possible signs of transport damage immediately after receipt.

12 Maintenance and cleaning

The multifunction counter does not require any maintenance.

The front side may be cleaned with commercially available household detergents.

For additional environmental protection, a flexible transparent face plate protector is available as an accessory

13 Trouble shooting

13 Trouble shooting



Warning!

Improper fault correction may cause serious damage or personal injury.

The machine/plant manufacturer is responsible for the preparation of operating instructions and troubleshooting protocols in the event of malfunctions. This is dependent on the end use design and application.

The first step is to determine if the cause of an error or malfunction implies a possible fault of the multifunction counter.

Possible of Errors

Error	Possible cause	To be corrected by:
Display remains dark	Machine/plant not powered on	Operator
Value is not stored	Defective voltage supply	Qualified electrician
	Power-on reset is active (F17)	Skilled personnel
Counter/tachometer does not count	Defective signal generator; Counter does not receive any counting signals	Skilled personnel

13 Malfunctions

Counter/tachometer does not count	Adjusted to incorrect mode of operation (F1), Single-channel, directional input, differential counting, phase discriminator	Skilled personnel
	Incorrect adjustment of PNP/NPN logic and input level (F3)	Skilled personnel
	High-level does not exceed the upper amplitude threshold; low-level does not fall below the lower amplitude threshold	Qualified electrician
	Continuous reset signal is applied	Qualified electrician
	Continuous gate/inhibit signal is applied	Qualified electrician
Incorrect counting of counter/tachometer	Prescaler value is not correct	Skilled personnel
	Phase discriminator - edge evaluation not correctly adjusted (F2)	Skilled personnel
	Input frequency too high (F4)	Skilled personnel
Keyboard Reset not possible	Keys are locked (F30 + F35)	Skilled personnel
Presetting not possible	Keys are locked (F31, F32, F33 + F35)	Skilled personnel
Prescaler adjustment not possible	Keys are locked (F34+ F35)	Skilled personnel

14 Spare Parts / 15 Dismantling and Disposal

Signal 0, 1 or 2 not received	Signal deactivated (F10, F11, F12)	Skilled personnel
	User signal time adjusted to 0,000	Skilled personnel

14 Spare Parts



Warning!
Use only OEM spare parts!

The use of incorrect or faulty spare parts may cause damage, malfunction or safety hazards. Therefore, use only spare parts provided by the OEM.

The multifunction counter may only be opened and serviced by the manufacturer.
Only external components are available as spare parts.

15 Dismantling and Disposal

After reaching the end of its useful life the multifunction counter has to be disposed of or recycled according to applicable local environmental laws.

16 Model Numbers

16 Model Numbers

Display	Relay	12-24 VDC	24 VAC	115 VAC	230 VAC	90-260 VAC*
LCD reflective	1	VC 0772101	VC 0772111	VC 0772121	VC 0772131	VC 0772141
LCD reflective	2	VC 0772102	VC 0772112	VC 0772122	VC 0772132	VC 0772142
LCD transfective positive	1	VC 0772201	-	-	-	VC 0772241
LCD transfective positive	2	VC 0772202	-	-	-	VC 0772242
LCD transmissive negative	1	VC 0772301	-	-	-	VC 0772341
LCD transmissive negative	2	VC 0772302	-	-	-	VC 0772342
LCD transmissive red	1	VC 0772401	-	-	-	VC 0772441
LCD transmissive red	2	VC 0772402	-	-	-	VC 0772442
LCD transmissive green	1	VC 0772501	-	-	-	VC 0772541
LCD transmissive green	2	VC 0772502	-	-	-	VC 0772542

Transfective Positive: black figures on back lit background
 Transmissive Negative: white figures on black background
 Transmissive red: red figures on black background
 Transmissive green: green figures on black background
 *not yet available

17 Accessories and spare parts

17 Accessories

Panael Adapter	Item no.	Dimensions	Front panel cutout
	1 405 675	60 x 75 mm (2.36 x 2.95 ")	55 x 55 mm (2.17 x 2.17 ")
	1 405 676	72 x 72 mm (2.83 x 2.83 ")	68 x 68 mm (2.68 x 2.68 ")
	1 405 679	125 x 60 mm (4.92 x 2.36 ")	106 x 55 mm (4.17 x 2.17 ") for installation of 2 counters
Protective Cover	2 772 052		48 x 48 mm (1.89 x 1.89 ")
Frame	1 721 014	48 x 48 mm (1.89 x 1.89 ")	

Version: 1 190410CB1



02772058



Danaher Controls | 2100 West Broad Street
Elizabethtown NC, 28337 | (0800) 390-6405

A Company of  **DANAHER**
SENSORS & CONTROLS